

ATND1061LK ATND1061DAN

Beamforming Array Microphone

IP Control Specifications

Revision history

Date	Description of change
6/19/2020	First version
5/24/2022	Changed the multicast address in 5.1.1. Changed Group ID and Internal ID to "Not used" in 4.5.37 and 4.5.38. Changed the command example in 4.5.37 and 4.5.38.
5/11/2023	Removed ATND-1061 notation and changed to ATND1061. 3: Added page number to Command List. 4.3.1,4.3.2,4.4.1,4.4.2,5.2.2,5.2.3: Corrected "db" notation in the table to "dB". 4.3.3,4.3.4,4.3.7,4.3.8: Removed unnecessary values from the table. 4.3.5,4.3.6: Corrected typos in the table. 4.3.11,4.3.12: Corrected unnecessary parameters to "Reserved"and corrected command example. 4.4.5,4.4.6: Removed unnecessary values from the table. 4.5.6,4.5.7: Changed "Switched" to "Single Cable". 4.5.9,4.5.10,4.5.11,4.5.12: Removed unused values. 4.5.37,4.5.38: Corrected the command example and changed unnecessary parameters to "Reserved". Added parameters in 4.5.39 and 4.5.40. 5.2.6, 5.2.7: Corrected Unit No from unused to Device ID. 6.5: Modified Input Gain Table. 6.7: Added Attenuation Level Table.
6/26/2023	3: Added camera-related commands to Command List. 4.6: Added Camera Command Details. 4.6.1 - 4.6.7: Added camera-related commands. 4.2.13: Added Device ID Change Request. 4.2.14: Added Device ID Acquisition Request. 4.2.15: Added Device ID Format Setting Request. 4.5.35: Added the value for External Control Setting Change Request. 4.5.36: Added the value for External Control Setting Acquisition Request.

Table of Contents

Revision history	1
1 Preface	5
1.1 Purpose of This Document.....	5
1.2 Definition of Terms and Numeric Representation	5
2 Basic Specifications	6
2.1 Communication Interfaces	6
2.2 Command Formats	7
2.2.1 Command Common Rules.....	7
2.2.2 Set Command/Get Command.....	9
2.2.3 ACK	10
2.2.4 NAK	10
2.2.5 Answer.....	12
2.2.6 Information	12
3 Command List.....	13
4 TCP Communications.....	17
4.1 Communication Control.....	17
4.1.1 Communication Start	18
4.1.2 Control Sequence	18
4.1.3 Communication Errors	20
4.1.4 Communication End.....	21
4.2 Individual Command Details.....	22
4.2.1 Input CH Level Change Request	22
4.2.2 Input CH Level Acquisition Request.....	23
4.2.3 Input CH Mute Status Change Request.....	25
4.2.4 Input CH Mute Status Acquisition Request	26
4.2.5 Output CH Level Change Request.....	28
4.2.6 Output CH Level Acquisition Request.....	29
4.2.7 Output CH Mute Status Change Request	31
4.2.8 Output CH Mute Status Acquisition Request.....	32
4.2.9 Preset Call Request	34
4.2.10 Preset Save Request	35
4.2.11 Device Mute Request.....	36
4.2.12 VAD Enable State Change Request.....	37
4.2.13 Device ID Change Request.....	38
4.2.14 Device ID Acquisition Request	39
4.2.15 Device ID Format Setting Request.....	41
4.3 Input Command Details.....	42
4.3.1 Input Gain&Level Setting Change Request.....	42
4.3.2 Input Gain&Level Setting Acquisition Request	44
4.3.3 Input Channel Setting Change Request.....	46

4.3.4	Input Channel Setting Acquisition Request	49
4.3.5	Input EQ Setting Change Request.....	53
4.3.6	Input EQ Setting Acquisition Request	55
4.3.7	Gain Share Setting Change Request.....	57
4.3.8	Gain Share Setting Acquisition Request	58
4.3.9	AEC Setting Change Request.....	60
4.3.10	AEC Setting Acquisition Request	62
4.3.11	AGC Setting Change Request	64
4.3.12	AGC Setting Acquisition Request.....	65
4.3.13	Gain Share Mode Change Request	67
4.3.14	Gain Share Mode Acquisition Request	68
4.4	Output Command Details.....	69
4.4.1	Output Level Setting Change Request.....	69
4.4.2	Output Level Setting Acquisition Request	69
4.4.3	Output Channel Mute Setting Change Request	72
4.4.4	Output Channel Mute Setting Acquisition Request	73
4.4.5	Output Channel Setting Change Request	75
4.4.6	Output Channel Setting Acquisition Request	77
4.5	System Command Details.....	79
4.5.1	Factory Default Setting Request	79
4.5.2	Permission Setting Change Request	81
4.5.3	Permission Setting Acquisition Request.....	83
4.5.4	Network Setting Change Request.....	84
4.5.5	Network Setting Acquisition Request	87
4.5.6	Dante Setting Change Request	90
4.5.7	Dante Setting Acquisition Request.....	92
4.5.8	Firmware Version Acquisition Request.....	94
4.5.9	Device Color Setting Change Request	95
4.5.10	Device Color Setting Acquisition Request.....	96
4.5.11	Log Setting Change Request	98
4.5.12	Log Setting Acquisition Request	99
4.5.13	Log Setting Change Request.....	101
4.5.14	LED Setting Acquisition Request	103
4.5.15	Preset Call Request	105
4.5.16	Preset Save Request	106
4.5.17	Preset Bank Name Change Request	107
4.5.18	Preset Bank Name Acquisition Request.....	108
4.5.19	Boot Up Preset Setting Change Request.....	110
4.5.20	Boot Up Preset Setting Acquisition Request	111
4.5.21	File Transfer Request.....	113
4.5.22	File Transfer Cancel Request.....	115
4.5.23	Export Request	116
4.5.24	Import Request	118

4.5.25	Level Meter Notification Interval Change Request	119
4.5.26	Level Meter Notification Interval Acquisition Request	120
4.5.27	Talker Position Interval Change Request	122
4.5.28	Talker Position Interval Acquisition Request.....	123
4.5.29	Identify Request	125
4.5.30	Date Setting Request	126
4.5.31	Reboot Request	127
4.5.32	Device ID Change Request.....	128
4.5.33	Device ID Acquisition Request	129
4.5.34	Preset Number Acquisition Request	129
4.5.35	External Control Setting Change Request	131
4.5.36	External Control Setting Acquisition Request.....	133
4.5.37	Device Interlock Setting Change Request.....	135
4.5.38	Device Interlock Setting Acquisition Request	136
4.5.39	Audio System Setting Change Request.....	138
4.5.40	Audio System Setting Acquisition Request	139
4.5.41	Power Save Mode Request	141
4.5.42	Device Mute Request.....	142
4.5.43	Device Mute Status Acquisition Request.....	143
4.6	Camera Command Details.....	145
4.6.1	Camera Device Setting Change Request	145
4.6.2	Camera Device Setting Acquisition Request.....	145
4.6.3	Camera Preset Setting Change Request	148
4.6.4	Camera Preset Setting Acquisition Request	150
4.6.5	Camera Control Time Setting Change Request	151
4.6.6	Camera Control Time Setting Acquisition Request	153
4.6.7	Camera Control Pause Request	155
5	UDP Communications	156
5.1	Communication Control.....	156
5.1.1	Communication Start	156
5.1.2	Control Sequence	156
5.1.3	Communication Errors	156
5.1.4	Communication End.....	156
5.2	Command Details.....	157
5.2.1	Level Meter Notice	157
5.2.2	Input Gain Level Setting Notice.....	160
5.2.3	Output Level Setting Notice	161
5.2.4	Output Channel Mute Setting Notice.....	162
5.2.5	Preset Call Notice	163
5.2.6	Talker Position.....	164
5.2.7	Power Save Mode Notice.....	165
5.2.8	Device Mute Notice.....	166
6	Appendix.....	167

6.1	Fader Table	167
6.2	Frequency Table.....	168
6.3	Q Value Table	169
6.4	EQ Gain Table.....	170
6.5	Input Gain Table	171
6.6	Transfer data type	172
6.7	Attenuation Level Table	172
6.8	Version correspondence table.....	173

1 Preface

1.1 Purpose of This Document

This document describes the command specifications to control the ATND1061 developed in Audio-Technica.

1.2 Definition of Terms and Numeric Representation

The following table shows the definition of terms used in this document.

Term	Description
Host	A device that issues control commands. It refers to application software or a control device.
Device	A device to be controlled.
AT device	A device developed by Audio-Technica.
Message	A character string transmitted per communication in data format.
Command	A command statement to control a device. It is included in a message.
Parameter	Used in combination with a command. It is a setting value that specifies a command behavior.

The numeric representation is defined as follows:

Binary number: A value followed by b Example: 1010 0110b

Hexadecimal number: A value preceded by 0x Example: 0xA6

2 Basic Specifications

The IP control function uses TCP or UDP protocol to control the ATND1061.

2.1 Communication Interfaces

Table 2-1 Communication Interfaces

No	Item	Content	Remarks
1.	Communication system	Full duplex	
2.	Transmission speed	10Mbps / 100Mbps	
3.	Port number	Described later	
4.	Maximum data length	287 bytes (including line feed codes)	32 bytes for Ethernet communication header, 255 bytes for control command
5.	Compatible connector	Device: RJ45 connector (compatible with 10/100 Mbps) Cable: CAT5e or higher	

2.2 Command Formats

Transmitted commands are categorized as follows:

Table 2-2 Communication Interfaces

No	Command	Content	Remarks
1.	Set Command	Action command	Change the ATND1061 settings.
2.	Get Command	Action command	Obtain the ATND1061 settings and status.
3.	ACK	Acknowledge	Responds to a Set Command.
4.	NAK	Negative acknowledge	Responds to a Set / Get Command.
5.	Answer	Setting change notification	Responds to a Get Command.
6.	Information	Status change notification	Report the ATND1061 settings and status change.
7.		Action request	Requests an action to the host.

2.2.1 Command Common Rules

- (1) Use a single-byte space (␣: 0x20) as a delimiter.
- (2) In general, use ASCII codes for commands and UTF-8 for the parameters of specific commands (Example: Naming a device, etc.).
- (3) Add CR (0x0d) to the end of each command.

Example:

```
factory_settings␣S␣0000␣00␣NC␣0␣␣
```

```
factory_settings␣ACK␣␣
```

```
factory_settings␣NAK␣01␣␣
```

```
g_deviceid␣O␣0000␣00␣NC␣␣
```

```
MD open_channel_notice␣0000␣00␣NC␣0,0,0,0,0,0␣␣
```

- : Indicates a space.
- ↓: Indicates CR (0x0d).
- █: Indicates a command parameter.

2.2.2 Set Command/Get Command

The action command format is shown below.

Table 2-3 Action Command Format

No	Item	Content	size	Remarks
1.	Command	Command string	0byte~	See 3.Command List.
2.	Handshake Select	Sequence execution method	1byte	H: Handshake method (Unused) O: One-Way method S: ACK/NAK format
3.	Model ID	Not used	4byte	0000 (fixed)
4.	Unit No	Not used	2byte	00 (fixed)
5.	Continue Select	Message split method	2byte	NC: No divided message CS: Head of divided message CM: Divided message CE: End of divided message
6.	Parameter	Command parameter	0byte~	See Chapter 4.
7.	End Character	Message end character	1byte	CR (0x0D)

2.2.2.1 Omitting Parameters

When you send a command from the host, you can omit its parameters. To omit them, specify no data by separating with commas (,) or leaving a space ().

Example: When all the parameters are omitted

```
s_network _S_ 0000 _00_ NC _ _ ↵
```

Depending on the command, however,

- An error may occur when all the parameters are omitted.
- The parameters may just not be specified instead of being omitted.

The details on the above cases and the parameters that cannot be omitted are provided for each command in Chapter 4 or later.

2.2.3ACK

The acknowledge command format is shown below.

Table 2-4 Acknowledge Command Format

No	Item	Content	Size	Remarks
1.	Command	Command string	0byte~	See 3.Command List.
2.	ACK	ACK	3byte	ACK (fixed)
3.	End Character	Message end character	1byte	CR (0x0D)

2.2.4NAK

The negative acknowledge command format is shown below.

Table 2-5 Negative Acknowledge Command Format

No	Item	Content	Size	Remarks
1.	Command	Command string	0byte~	See 3.Command List.
2.	NAK	NAK	3byte	NAK (fixed)
3.	Error Code	Error Codes	2byte	See Table 2-6 .
4.	End Character	Message end character	1byte	CR (0x0D)

2.2.4.1 Error Codes

The error codes are shown below.

Table 2-6 Error Codes

Error Codes	Error description	Remarks
01	Syntax error	<ul style="list-style-type: none">• A required element is not found.• The character string of a required element is incorrect.• The character string length for each element is outside the specified range.• The message string length including line feed codes is greater than the upper limit.
02	Invalid command	<ul style="list-style-type: none">• The command is not found.

Error Codes	Error description	Remarks
		(A non-existing command was specified. A command that cannot be used for the device was specified.)
03	Splitting transmission error	<ul style="list-style-type: none"> "CM" or "CE" was specified when "CS" of Continue Select had not been received.
04	Parameter error	<ul style="list-style-type: none"> The parameter is outside the specified range. Changing a parameter that cannot be changed was attempted.
05	Transmission timeout	Not used
90	Busy	Unable to process due to a busy state
92	Busy (Save mode)	Unable to process due to p-Fail (power shutdown) occurrence
93	Busy(Extension)	Not used
99	Other errors	Errors other than the above

2.2.5 Answer

The command format of the setting status response is shown below.

Table 2-7 Setting Status Return Command Format

No	Item	Content	size	Remarks
1.	Command	Command string	0byte~	See 3.Command List.
2.	Model ID	Not used	4byte	0000 (fixed)
3.	Unit No	Device ID	2byte	00 to FF
4.	Continue Select	Message split method	2byte	NC: No divided message CS: Head of divided message CM: Divided message CE: End of divided message
5.	Parameter	Command parameter	0byte~	See Chapters 4 and 4.6.
6.	End Character	Message end character	1byte	CR (0x0D)

2.2.6 Information

The command format of the status change notification is shown below.

Table 2-8 Status Change Notification Command Format

No	Item	Content	size	Remarks
1.	Modify	MD	2byte	MD (fixed)
2.	Command	Command string	5byte	See 3.Command List.
3.	Model ID	Not used	4byte	0000 (fixed)
4.	Unit No	Device ID	2byte	00 to FF
5.	Continue Select	Message split method	2byte	NC: No divided message CS: Head of divided message CM: Divided message CE: End of divided message
6.	Parameter	Command parameter	0byte~	See Chapter 4.6.
7.	End Character	Message end character	1byte	CR (0x0D)

3 Command List

Table 3-1 Command List

No	Category	Command	Command Name	Remarks	Type			Ref.
					set	get	info	
1	Individual command	SICL	Input CH Level Change Request		○			22
2		GICL	Input CH Level Acquisition Request			○		23
3		SICM	Input CH Mute Status Change Request		○			25
4		GICM	Input CH Mute Status Acquisition Request			○		26
5		SOCL	Output CH Level Change Request		○			28
6		GOCL	Output CH Level Acquisition Request			○		29
7		SOCM	Output CH Mute Status Change Request		○			31
8		GOCM	Output CH Mute Status Acquisition Request			○		32
9		CALLP	Preset Call Request		○			34
10		REGIP	Preset Save Request		○			35
11		MUTE	Device Mute Request		○			36
12		SVAD	VAD Enable State Change Request		○			37
13	Input	s_input_gain_level	Input Gain&Level Setting Change Request		○			42
14		g_input_gain_level	Input Gain&Level Setting Acquisition Request			○		44
15		input_gain_level_meter_notice	Input Gain Level Setting Notice				○	160
16		s_input_channel_settings	Input Channel Setting Change Request		○			46
17		g_input_channel_settings	Input Channel Setting Acquisition Request			○		49
18		s_input_eq	Input EQ Setting Change Request		○			53
19		g_input_eq	Input EQ Setting Acquisition Request			○		55
20		s_aec_general	AEC Setting Change Request		○			60
21		g_aec_general	AEC Setting Acquisition Request			○		62
22		s_smart_mix	Gain Share Setting Change Request		○			57
23		g_smart_mix	Gain Share Setting Acquisition Request			○		58
24		s_agc	AGC Setting Change Request		○			64
25		g_agc	AGC Setting Acquisition Request			○		65
26		s_gainshare_mode	Gain Share Mode Change Request		○			67
27		g_gainshare_mode	Gain Share Mode Acquisition Request			○		68

No	Category	Command	Command Name	Remarks	Type			Ref.
					set	get	info	
28	Output	s_output_level	Output Level Setting Change Request		○			69
29		g_output_level	Output Level Setting Acquisition Request			○		69
30		output_level_notice	Output Level Setting Notice				○	161
31		s_output_mute	Output Channel Mute Setting Change Request		○			72
32		g_output_mute	Output Channel Mute Setting Acquisition Request			○		73
33		output_mute_notice	Output Channel Mute Setting Notice				○	162
34		s_output_channel_settings	Output Channel Setting Change Request		○			75
35		g_output_channel_settings	Output Channel Setting Acquisition Request			○		77
36	System	factory_settings	Factory Default Setting Request		○			79
37		s_deviceid	Device ID Change Request		○			128
38		g_deviceid	Device ID Acquisition Request			○		129
39		s_permission	Permission Setting Change Request		○			81
40		g_permission	Permission Setting Acquisition Request			○		83
41		s_network	Network Setting Change Request		○			84
42		g_network	Network Setting Acquisition Request			○		87
43		s_network_dante	Dante Setting Change Request		○			90
44		g_network_dante	Dante Setting Acquisition Request			○		92
45		g_firmware_version	Firmware Version Acquisition Request			○		94
46		s_header_color	Device Color Setting Change Request		○			95
47		g_header_color	Device Color Setting Acquisition Request			○		96
48		s_log	Log Setting Change Request		○			98
49		g_log	Log Setting Acquisition Request			○		99
50		s_remotecontrol	External Control Setting Change Request		○			131
51		g_remotecontrol	External Control Setting Acquisition Request			○		133
52		s_syncontrol	Device Interlock Setting Change Request		○			135
53		g_syncontrol	Device Interlock Setting Acquisition Request			○		136
54		s_audio_system	Audio System Setting Change Request		○			138
55		g_audio_system	Audio System Setting Acquisition Request			○		139
56		call_preset	Preset Call Request		○			105

No	Category	Command	Command Name	Remarks	Type			Ref.
					set	get	info	
57		save_preset	Preset Save Request		○			106
58		s_name_bank	Preset Bank Name Change Request		○			107
59		g_name_bank	Preset Bank Name Acquisition Request			○		108
60		s_bootup_preset	Boot Up Preset Setting Change Request		○			110
61		g_bootup_preset	Boot Up Preset Setting Acquisition Request			○		111
62		g_preset_number	Preset Number Acquisition Request			○		129
63		recall_preset_notice	Preset Call Notice				○	163
64		file_transfer	File Transfer Request		○			113
65		file_transfer_cancel	File Transfer Cancel Request		○			115
66		export	Export Request			○		116
67		import	Import Request		○			118
68		s_level_meter_interval	Level Meter Notification Interval Change Request		○			119
69		g_level_meter_interval	Level Meter Notification Interval Acquisition Request			○		120
70		level_meter_notice	Level Meter Notice				○	157
71		s_talkerposition_interval	Talker Position Interval Change Request		○			122
72		g_talkerposition_interval	Talker Position Interval Acquisition Request			○		123
73		talkerposition_notice	Talker Position				○	164
74		identify	Identify Request		○			125
75		s_date	Date Setting Request		○			126
76		reboot	Reboot Request		○			127
77		s_powersave	Power Save Mode Request		○			141
78		powersave_notice	Power Save Mode Notice				○	165
79		s_mute	Device Mute Request		○			142
80		g_mute	Device Mute Status Acquisition Request			○		143
81		mute_notice	Device Mute Notice				○	166
82	Camera	s_camera_device	Camera Device Setting Change Request		○			145
83		g_camera_device	Camera Device Setting Acquisition Request			○		145
84		s_camera_preset	Camera Preset Setting Change Request		○			148
85		g_camera_preset	Camera Preset Setting Acquisition Request			○		150

No	Category	Command	Command Name	Remarks	Type			Ref.
					set	get	info	
86		s_camera_control	Camera Control Time Setting Change Request		○			151
87		g_camera_control	Camera Control Time Setting Acquisition Request			○		153
88		s_camera_stop	Camera Control Pause Request		○			155

4 TCP Communications

To control the ATND1061 from the host, TCP protocol is used for communications.

4.1 Communication Control

The following figure shows the communication control flow of IP control.

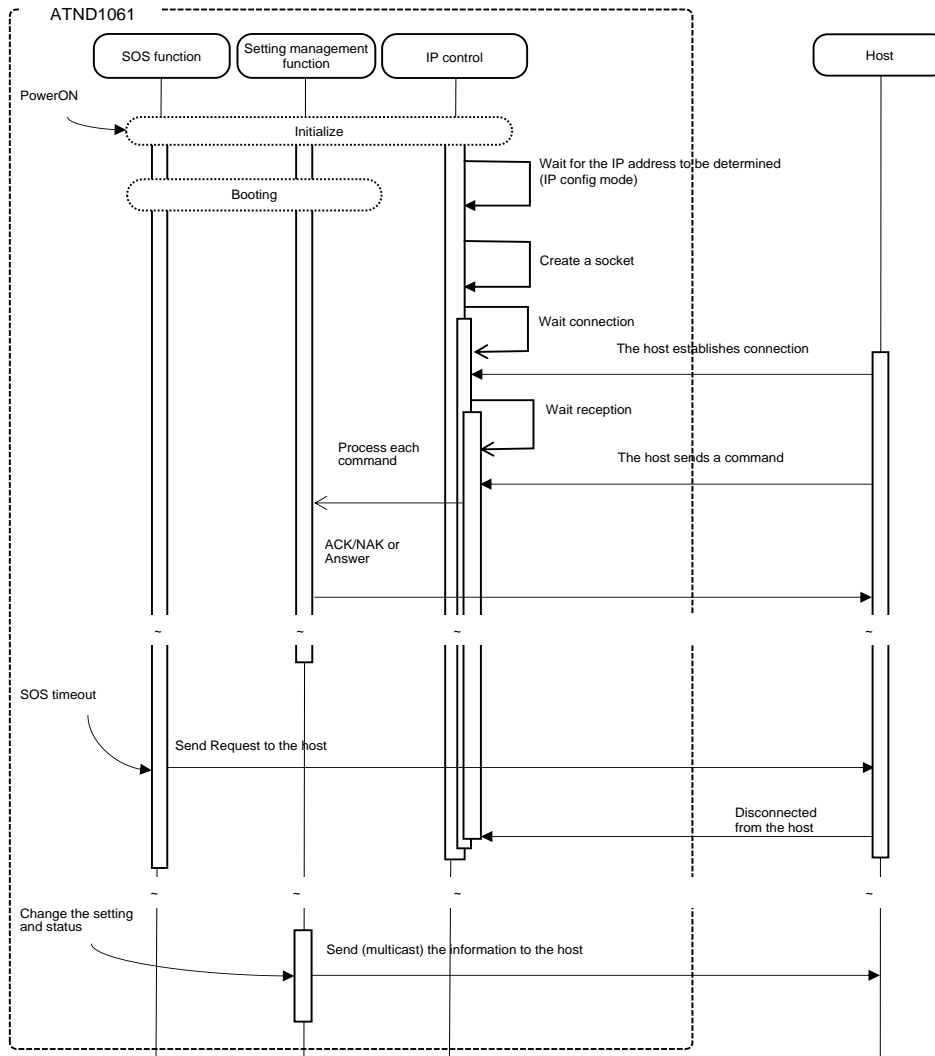


Figure 4-1 Communication Control Flow

- After the system is booted, the status changes from initializing to connection waiting.
- When the host establishes connection with the system, the status changes from connection waiting to reception waiting.
- Received commands are processed by internal processing tasks, and the results (ACK/NAK) are sent.
Since commands are asynchronously processed, reception is possible even during processing (The next command can be sent without waiting for ACK/NAK and Answer). However, some commands return NAK (90: BUSY).
- When the system is disconnected from the host, the status changes from reception waiting to connection waiting.

4.1.1 Communication Start

The host establishes connections with the ATND1061.

Simultaneous connection is limited to 5 devices. If the number exceeds the upper limit, the extra connection fails.

Table 4-1 Communication Control Parameters

No	Name	Default Setting	Remarks
1.	IPAddress	Auto	
2.	Port No	17300	

4.1.2 Control Sequence

4.1.2.1 Set Command

Responding to a Set Command, the ATND1061 sends ACK/NAK to the sender.

<Example> The sequence of factory default setting is shown below.

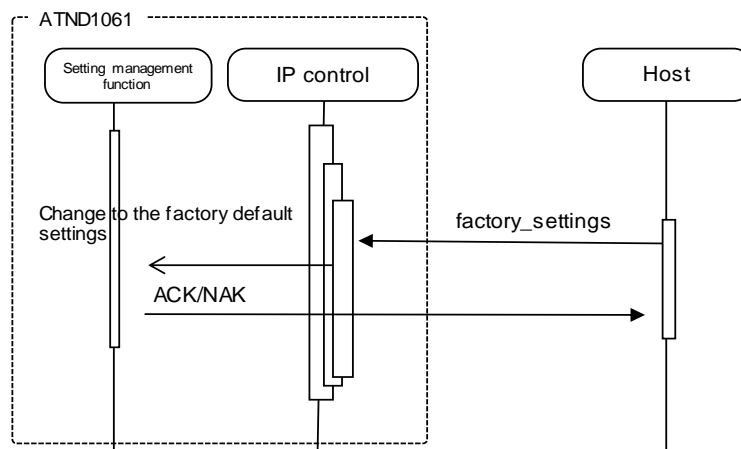


Figure 4-2 Set Command Processing Sequence

If an error occurs in a Set Command, such as a syntax error or incorrect parameter, an NAK command is sent to the sender.

4.1.2.2 Get Command

Responding to a Get Command, the ATND1061 sends Answer to the sender.

<Example> The sequence of Output Level Setting Acquisition Request is shown below.

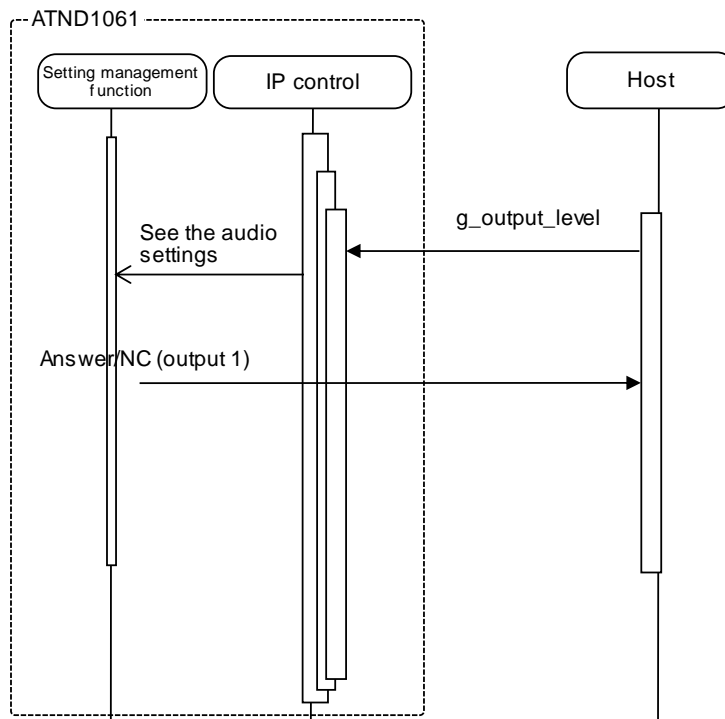


Figure 4-3 Get Command Processing Sequence

If an error occurs in a Get Command, such as a syntax error or incorrect parameter, an NAK command is sent to the sender.

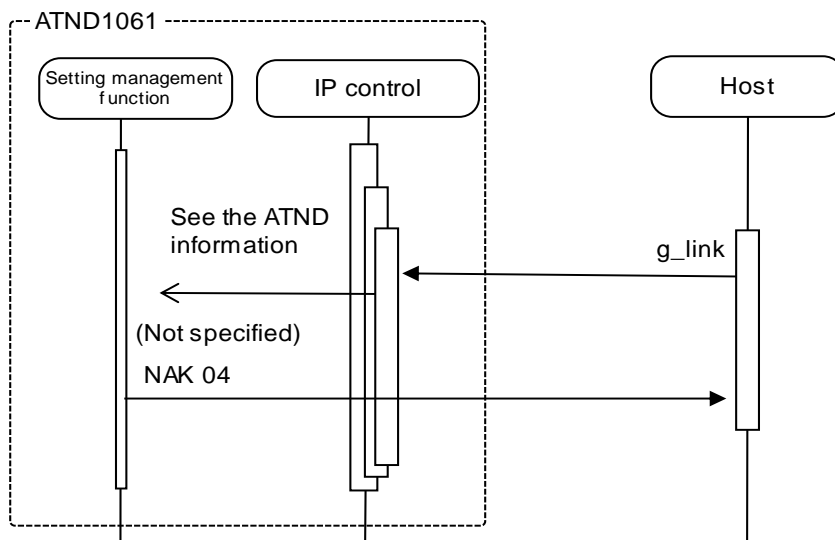


Figure 4-4 Get Command Processing Sequence (NAK)

4.1.3 Communication Errors

4.1.3.1 Transmission error

The following figure shows the sequence when an ACK/NAK transmission error occurs.

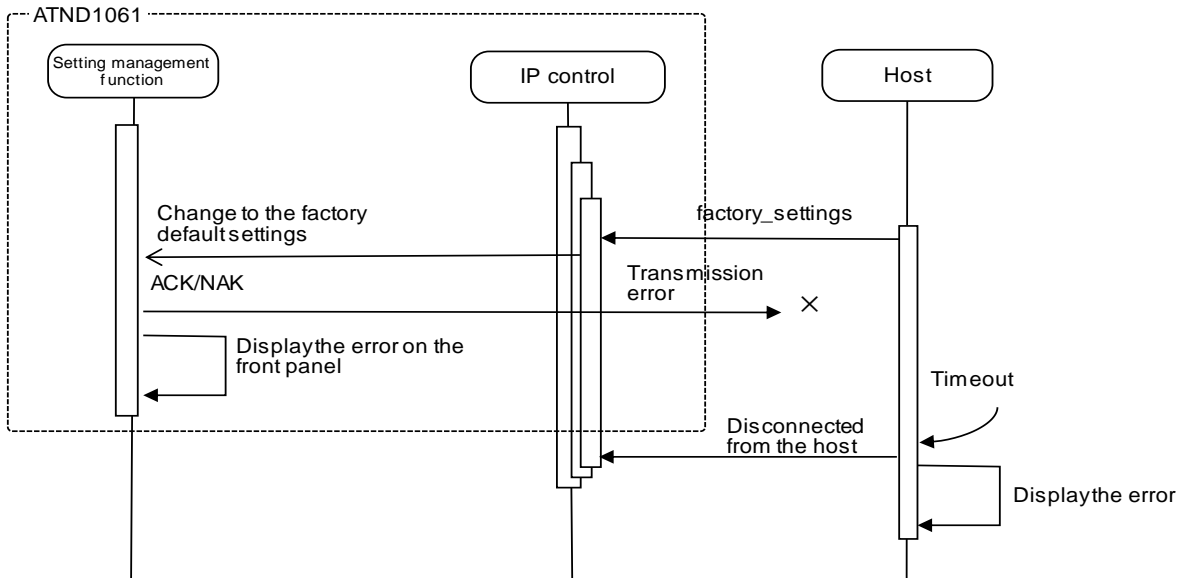


Figure 4-5 Sequence for Transmission Errors

4.1.3.2 Receive error

The following figure shows the sequence when a command receive error occurs.

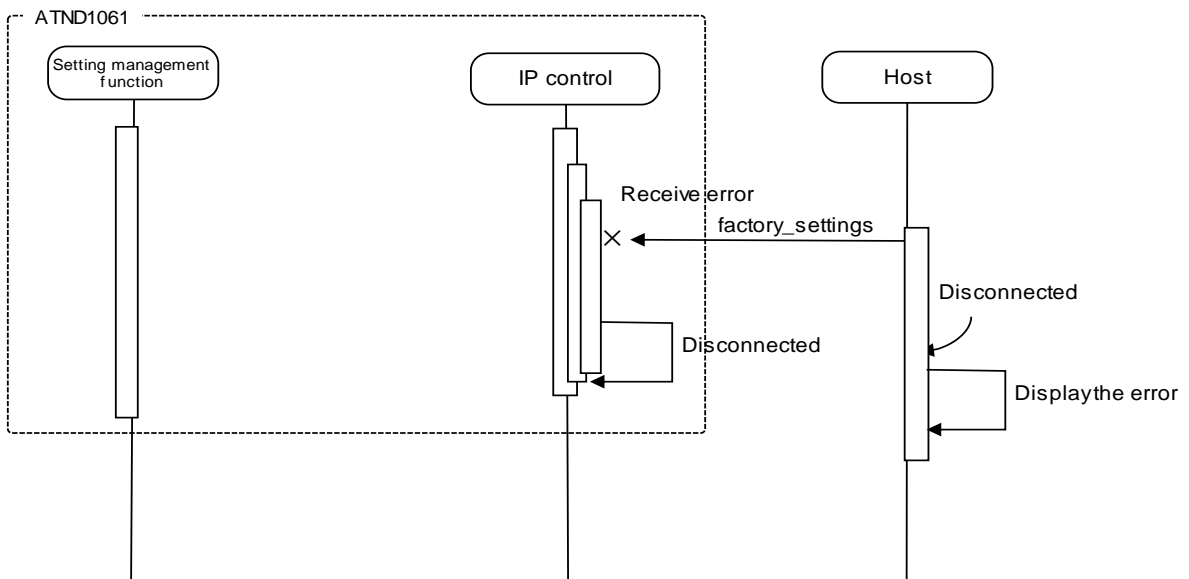


Figure 4-6 Sequence for Receive Errors

4.1.3.3 Message Split Receive Timeouts

The following figure shows the sequence when a message split receive timeout occurs.

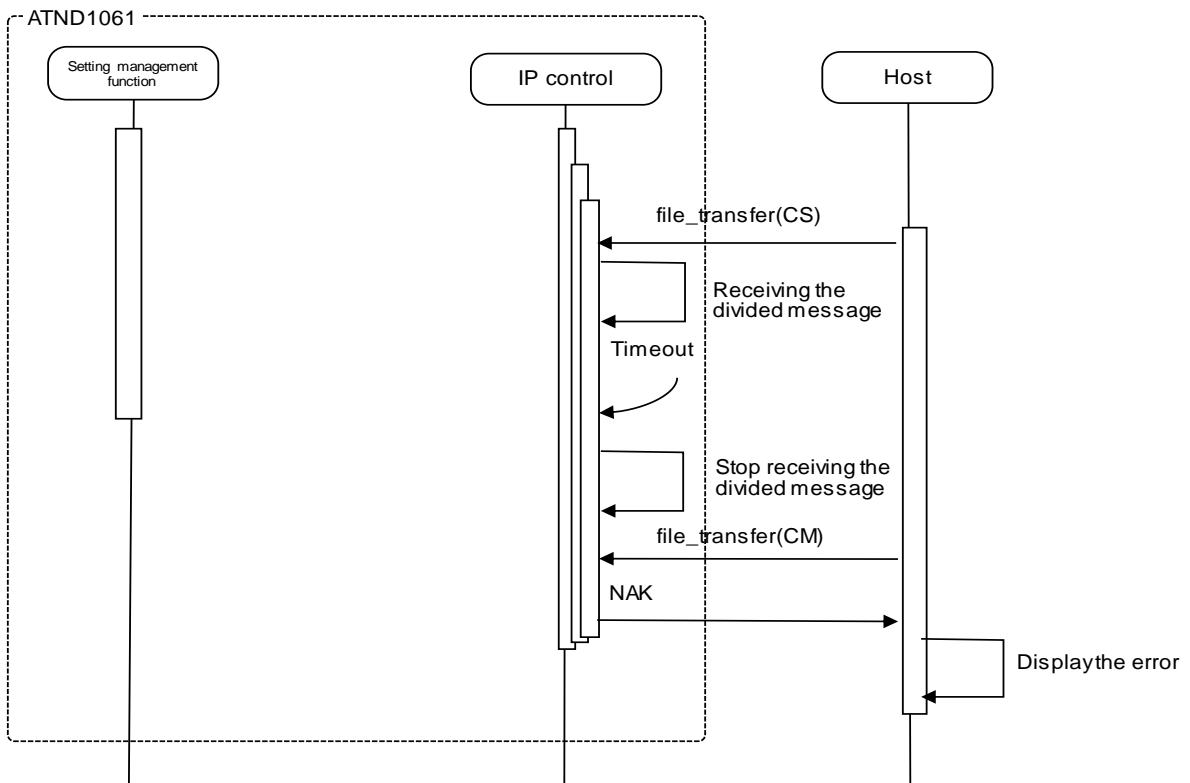


Figure 4-7 Sequence for Message Split Receive Timeouts

4.1.4 Communication End

The host can be disconnected at any timing when communications end.

When it is disconnected, the ATND1061 clears the corresponding connection state (Example: File transferring) and enters the connection wait state again. This occurs even if a cable is disconnected.

To communicate again, the host needs to establish connection.

4.2 Individual Command Details

4.2.1 Input CH Level Change Request

After receiving the Input CH Level Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input CH Level Change Request from the host is shown below.

SICL_S_0000_00_NC_6,511_↵

Table 4-2 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SICL		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5 6	Beam Channel 1 to 6 Analog Input	
	Level	Level	string	0 to 511	-∞, -120 to +10 dB	See 6.1 Fader Table.
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.2 Input CH Level Acquisition Request

After receiving the Input CH Level Acquisition Request, the ATND1061 sends the input CH level to the host via Answer.

(1) Get Command

The command format of the Input CH Level Acquisition Request from the host is shown below.

GICL_O_0000_00_NC_6_↵

Table 4-3 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GICL		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Input Channel Select	Parameter Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

GICL_0000_00_NC_6,511_↵

Table 4-4 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GICL		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
Level	Level	string	0 to 511	-∞, -120 to +10 dB	See 6.1 Fader Table.	
6	End Character	Message end character	binary	0x0d	CR	

4.2.3 Input CH Mute Status Change Request

After receiving the Input CH Mute Status Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input CH Mute Status Change Request from the host is shown below.

SICM_S_0000_00_NC_6,1_↓

Table 4-5 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SICM		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
	Mute	Mute	string	0	Without muting	
1				With muting		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.4 Input CH Mute Status Acquisition Request

After receiving the Input CH Mute Status Acquisition Request, the ATND1061 sends the input CH mute status to the host via Answer.

(1) Get Command

The command format of the Input CH Mute Status Acquisition Request from the host is shown below.

GICM_O_0000_00_NC_6_↓

Table 4-6 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GICM		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Input Channel Select	Parameter Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

GICM_0000_00_NC_6,1_↵

Table 4-7 Answer Command Format

No	item	Description	type	value	value description	remarks			
1	Command	Command string	string	GICM					
2	Model ID	Not used	string	0000	Not used				
3	Unit No	Device ID	string	00 to FF	Device ID				
4	Continue Select	Message split method	string	NC	No split				
5	Parameter	Parameter							
				Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
							6	Analog Input	
				Mute	Mute	string	0	Without muting	
1	With muting								
6	End Character	Message end character	binary	0x0d	CR				

4.2.5 Output CH Level Change Request

After receiving the Output CH Level Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Output CH Level Change Request from the host is shown below.

SOCL_S_0000_00_NC_0,511_↓

Table 4-8 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SOCL		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
Level	Level	string	0 to 511	-∞, -120 to +10 dB	See 6.1 Fader Table.	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.6 Output CH Level Acquisition Request

After receiving the Output CH Level Acquisition Request, the ATND1061 sends output CH level to the host via Answer.

(1) Get Command

The command format of the Output CH Level Acquisition Request from the host is shown below.

GOCL_O_0000_00_NC_0_↓

Table 4-9 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GOCL		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Output Channel Select	Parameter Output channel selection	string	0	Analog Out	
				1	Auto Mix	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

GOCL_0000_00_NC_0,511_↵

Table 4-10 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GOCL		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
Level	Level	string	0 to 511	-∞, -120 to +10 dB	See 6.1 Fader Table.	
6	End Character	Message end character	binary	0x0d	CR	

4.2.7 Output CH Mute Status Change Request

After receiving the Output CH Mute Status Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input CH Mute Status Change Request from the host is shown below.

SOCM_S_0000_00_NC_0,1_↓

Table 4-11 Command Format

No	item	Description	type	value	value description	remarks		
1	Command	Command string	string	SOCM				
2	HandShake Select	Sequence execution method	string	S				
3	Model ID	Not used	string	0000	Not used			
4	Unit No	Not used	string	00	Not used			
5	Continue Select	Message split method	string	NC	No split			
6	Parameter	Parameter						
			Output Channel Select	Output channel selection	string	0	Analog Out	
						1	Auto Mix	
			Mute	Mute	string	0	Without muting	
1	With muting							
7	End Character	Message end character	binary	0x0d	CR			

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.8 Output CH Mute Status Acquisition Request

After receiving the Output CH Mute Status Acquisition Request, the ATND1061 sends output CH mute status to the host via Answer.

(1) Get Command

The command format of the Output CH Mute Status Acquisition Request from the host is shown below.

GOCM_O_0000_00_NC_0_↓

Table 4-12 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GOCM		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Output Channel Select	Parameter Output channel selection	string	0	Analog Out	
				1	Auto Mix	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

GOCM_0000_00_NC_0,1_↵

Table 4-13 Answer Command Format

No	item	Description	type	value	value description	remarks			
1	Command	Command string	string	GOCM					
2	Model ID	Not used	string	0000	Not used				
3	Unit No	Device ID	string	00 to FF	Device ID				
4	Continue Select	Message split method	string	NC	No split				
5	Parameter	Parameter							
				Output Channel Select	Output channel selection	string	0	Analog Out	
							1	Auto Mix	
				Mute	Mute	string	0	Without muting	
							1	With muting	
6	End Character	Message end character	binary	0x0d	CR				

4.2.9Preset Call Request

After receiving the Preset Call Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Preset Call Request from the host is shown below.

CALLP _ S _ 0000 _ 00 _ NC _ 16 _ ↵

Table 4-14 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	CALLP		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.10 Preset Save Request

After receiving the Preset Save Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Preset Save Request from the host is shown below.

```
REGIP_S_0000_00_NC_16_↓
```

Table 4-15 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	REGIP		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.11 Device Mute Request

After receiving the Device Mute Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Device Mute Request from the host is shown below.

MUTE_S_0000_00_NC_1_↓

Table 4-16 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	MUTE		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Mute	Mute	string	0	Without muting	
				1	With muting	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.12 VAD Enable State Change Request

After receiving the VAD Enable State Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the VAD Enable State Change Request from the host is shown below.

```
SVAD_S_0000_00_NC_1_↓
```

Table 4-17 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SVAD		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
			VAD Enabled	VAD enable	string	0
				1	VAD enable	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.13 Device ID Change Request

After receiving the Device ID Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Device ID Change Request from the host is shown below.

SDID_S_0000_00_NC_03E7_↵

Table 4-18 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SDID		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Device ID	Device ID	string	0000 to 03E7 or 0 to 999	Device ID	set by SFID command
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.2.14 Device ID Acquisition Request

After receiving the Device ID Acquisition Request, the ATND1061 sends the header color settings to the host via Answer.

(1) Get Command

The command of the Device ID Acquisition Request from the host is shown below

GDID_O_0000_00_NC_↵

Table 4-19 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	GDID		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

GDID_0000_00_NC_03E7_↓

Table 4-20 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_deviceid		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Device ID	Device ID	string	0000 to 03E7 or 0 to 999	Device ID	set by SFID command
6	End Character	Message end character	binary	0x0d	CR	

4.2.15 Device ID Format Setting Request

After receiving the Device ID Format Setting Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Device ID Format Setting Request from the host is shown below.

SFID_S_0000_00_NC_1_↵

Table 4-21 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	SFID		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Format	Device ID format	string	0 1	Hexadecimal number Decimal number	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3 Input Command Details

4.3.1 Input Gain&Level Setting Change Request

After receiving the Input Gain&Level Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input Gain&Level Setting Change Request from the host is shown below.

s_input_gain_level_S_0000_00_NC_6,40,40,511,,,1,,,↵

Table 4-22 Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	s_input_gain_level			
2	HandShake Select	Sequence execution method	string	S			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Not used	string	00	Not used		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter					
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6		
				6	Analog Input		
	gain						
	Mic	Mic gain	string	0 to 30	+0dB to +30dB	See 6.5 Input Gain Table. Disabled for analog input.	
	Level	Level	string	0 to 511	-120dB to +10dB	See 6.1 Fader Table.	
	Max Volume					Not used	
	Enable	On/Off	string				
	Value	Volume	string				
	Mute	Mute	string	0	Without muting		
				1	With muting		
	gain					Not used	
	Virtual Mic	Virtual Mic gain	string				

No	item	Description	type	value	value description	remarks
	Min Volume					Not used
	Enable	On/Off	string			
	Value	Volume	string			
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.2 Input Gain&Level Setting Acquisition Request

After receiving the Input Gain&Level Setting Acquisition Request, the ATND1061 sends the input settings to the host via Answer.

(1) Get Command

The command format of the Input Gain&Level Setting Acquisition Request from the host is shown below.

g_input_gain_level_O_0000_00_NC_6_↵

Table 4-23 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_input_gain_level		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5 6	Beam Channel 1 to 6 Analog Input	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_input_gain_level_0000_00_NC_6,40,40,511,,,1,,,↵

Table 4-24 Answer Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	g_input_gain_level			
2	Model ID	Not used	string	0000	Not used		
3	Unit No	Device ID	string	00 to FF	Device ID		
4	Continue Select	Message split method	string	NC	No split		
5	Parameter	Parameter					
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6		
				6	Analog Input		
	gain						
	Mic	Mic gain	string	0 to 30	+0dB to +30dB	See 6.5 Input Gain Table.	
				0	+0.25dB		For analog input
	Line	Line gain	string	1	+0.5dB	For analog input	
	Level	Level	string	0 to 511	-120dB to +10dB	See 6.1 Fader Table.	
	Max Volume						Not used
	Enable	On/Off	string				
				Value	Volume	string	
	Mute	Mute	string	0	Without muting		
				1	With muting		
	gain						Not used
	Virtual Mic	Virtual Mic gain	string				
	Min Volume						Not used
	Enable	On/Off	string				
Value				Volume	string		
6	End Character	Message end character	binary	0x0d	CR		

4.3.3 Input Channel Setting Change Request

After receiving the Input Channel Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input Channel Setting Change Request from the host is shown below.

s_input_channel_settings_S_0000_00_NC_6,1,1,,1,1,1,,,,,,,,,,,,,"ANALOG",,,,,,,,,,1,50,60,␣␣

Table 4-25 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_input_channel_settings		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5 6	Beam Channel 1 to 6 Analog Input	
	source	Input source	string	0 1	Mic Line	Only for analog Ch
	Phantom power	Phantom power	string	0 1	Off On	
	Phase	Phase	string			Not used
	Low cut	Low cut	string	0 1	Off On	
	AEC	AEC	string	0 1	Off On	
	Smart Mix	Smart Mix	string	0 1	Off On	
	Link	Link	string			Not used
	Output Bus					
	Bus 1					Not used
	Bus 2					Not used
	Bus 3					Not used

No	item	Description	type	value	value description	remarks
	Bus 4					Not used
	Bus 5					Not used
	Bus 6					Not used
	Bus 7					Not used
	Bus 8					Not used
	Bus 9					Not used
	Bus 10					Not used
	Bus ST					Not used
	Name	Channel name	char	"	Beginning of character string	
string			ASCII code	Name	To contain double quotation marks ("), specify them in succession like "".	
char			"	End of character string		
	Color	Channel color	string	0	Green	
				1	Yellow	
				2	Brown	
				3	Red	
				4	Pink	
				5	Blue	
				6	Gray	
				7	DarkGray	
	Virtual Mic					Not used
	Orientation	Orientation	string			
	Tilt	Tilt	string			
	Pattern	Pattern	string			
	Placement	Orientation	string			
	Fader Group	Fader Group	string			Not used
	Smart Mix Group	Smart Mix Group	string			Not used
	Mono	Mono	string			Not used

No	item	Description	type	value	value description	remarks
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.4 Input Channel Setting Acquisition Request

After receiving the Input Channel Setting Acquisition Request, the ATND1061 sends the input settings to the host via Answer.

(1) Get Command

The command format of the Input Channel Setting Acquisition Request from the host is shown below.

g_input_channel_settings_O_0000_00_NC_6_↵

Table 4-26 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_input_channel_settings		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Input Channel Select	Parameter Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

`g_input_channel_settings_0000_00_NC_6,1,1,,1,1,1,,,,,,,,,,,,,"ANALOG",,,,,,,,,1,50,60,_,_,_`

Table 4-27 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_input_channel_settings		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5 6	Beam Channel 1 to 6 Analog Input	
	source	Input source	string	0 1	Mic Line	
	Phantom power	Phantom power	string	0 1	Off On	
	Phase	Phase	string			Not used
	Low cut	Low cut	string	0 1	Off On	
	AEC	AEC	string	0 1	Off On	
	Smart Mix	Smart Mix	string	0 1	Off On	
	Link	Link	string			Not used
	Output Bus					
	Bus 1				Not used	
	Bus 2				Not used	
	Bus 3				Not used	
	Bus 4				Not used	
	Bus 5				Not used	
	Bus 6				Not used	
	Bus 7				Not used	
	Bus 8				Not used	

No	item	Description	type	value	value description	remarks
		Bus 9			Not used	
		Bus 10			Not used	
		Bus ST			Not used	
	Name	Channel name	char	"	Beginning of character string	
			string	ASCII code	Name	To contain double quotation marks ("), specify them in succession like "".
			char	"	End of character string	
	Color	Channel color	string	0	Green	
				1	Yellow	
				2	Brown	
				3	Red	
				4	Pink	
				5	Blue	
				6	Gray	
				7	DarkGray	
	Virtual Mic					Not used
	Orientation	Orientation	string			
	Tilt	Tilt	string			
	Pattern	Pattern	string			
	Placement	Orientation	string			
	Fader Group	Fader Group	string			Not used
	Smart Mix Group	Smart Mix Group	string			Not used
	Mono	Mono	string			Not used

No	item	Description	type	value	value description	remarks
6	End Character	Message end character	binary	0x0d	CR	

4.3.5 Input EQ Setting Change Request

After receiving the Input EQ Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Input EQ Setting Change Request from the host is shown below.

s_input_eq_S_0000_00_NC_11,0,1,2,480,72,31,1,480,72,31,1,480,72,31,1,2,480,72,31,
1↵

Table 4-28 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_input_eq		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5 6	Beam Channel 1 to 6 Analog Input	
	EQ On/Off	On/Off for the whole EQ CH	string	0 1	Off On	
	Band1					
	Band Enable	Enable	string			Not used
	Filter Type	Type of filter	string	0	LPF/HPF	
1				LSH/HSB		
2				PEQ		
	Frequency	Frequency	string	0 to 480	20 Hz to 20 kHz	See 6.2 Frequency Table.
	Gain	Gain	string	0 to 72	-18 dB to +18 dB	See 6.4 EQ Gain Table.
	Q Value	Value of Q	string	0 to 31	0.3 to 60	See 6.3 Q Value Table.
	Band2					
	Band Enable	Enable	string			Not used
	Frequency	Frequency	string	0 to 480	20 Hz to 20 kHz	See 6.2 Frequency Table.

No	item	Description	type	value	value description	remarks
	Gain	Gain	string	0 to 72	-18 dB to +18 dB	See 6.4 EQ Gain Table.
	Q Value	Value of Q	string	0 to 31	0.3 to 60	See 6.3 Q Value Table.
	Band3					Same as Band2
	Band4					Same as Band1
	EQ Mode	EQ mode	string	0 1	Easy Mode Expert Mode	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.6 Input EQ Setting Acquisition Request

After receiving the Input EQ Setting Acquisition Request, the ATND1061 sends the input settings to the host via Answer.

(1) Get Command

The command format of the Input EQ Setting Acquisition Request from the host is shown below.

```
g_input_eq_O_0000_00_NC_0_↵
```

Table 4-29 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_input_eq		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
				6	Analog Input	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

```
g_input_eq_0000_00_NC_11,0,1,2,480,72,31,1,480,72,31,1,480,72,31,1,2,480,72,31,1_↵
```

Table 4-30 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_input_eq		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to	

No	item	Description	type	value	value description	remarks
					6	
				6	Analog Input	
	EQ On/Off	On/Off for the whole EQ CH	string	0	Off	
				1	On	
	Band1					
	Band Enable	Enable	string	0	Off	
				1	On	
	Filter Type	Type of filter	string	0	LPF/HPF	
				1	LSH/HSB	
				2	PEQ	
	Frequency	Frequency	string	0 to 480	20 Hz to 20 kHz	See 6.2 Frequency Table.
	Gain	Gain	string	0 to 72	-18 dB to +18 dB	See 6.4 EQ Gain Table.
	Q Value	Value of Q	string	0 to 31	0.3 to 60	See 6.3 Q Value Table.
	Band2					
	Band Enable	Enable	string	0	Off	
				1	On	
	Frequency	Frequency	string	0 to 480	20 Hz to 20 kHz	See 6.2 Frequency Table.
	Gain	Gain	string	0 to 72	-18 dB to +18 dB	See 6.4 EQ Gain Table.
	Q Value	Value of Q	string	0 to 31	0.3 to 60	See 6.3 Q Value Table.
	Band3					
Band4						
EQ Mode	EQ mode	string	0	Easy Mode		
			1	Expert Mode		
6	End Character	Message end character	binary	0x0d	CR	

4.3.7 Gain Share Setting Change Request

After receiving the Gain Share Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Gain Share Setting Change Request from the host is shown below.

s_smart_mix_S_0000_00_NC_5,,60,,,,_↓

Table 4-31 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_smart_mix		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
	Smart Mix Group	Smart Mix Group	string			Not used
	GainShare					
	Weight	Weight of GainShare	string	0 to 60	-15.0,-14.5 to +15.0	
	Gate					
	Priority	Priority	string			Not used
	Can Cut	Cut	string			
Off Atenuation of closed mic	Off mic attenuation	string				
Threshold	Attenuation	string				
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.8 Gain Share Setting Acquisition Request

After receiving the Gain Share Setting Acquisition Request, the ATND1061 sends the input settings to the host via Answer.

(1) Get Command

The command format of the Gain Share Setting Acquisition Request from the host is shown below.

g_smart_mix_O_0000_00_NC_5_↓

Table 4-32 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_smart_mix		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_smart_mix_0000_00_NC_5,,60,,,,_↓

Table 4-33 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_smart_mix		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Input Channel Select	Input channel selection	string	0 to 5	Beam Channel 1 to 6	
	Smart Mix Group	Smart Mix Group	string			Not used
	GainShare					
	Weight	Weight of GainShare	string	0 to 60	-15.0,-14.5 to +15.0	
	Gate					Not used
	Priority	Priority	string			
	Can Cut	Cut	string			
Off Atenuation of closed mic	Off mic attenuation	string				
Threshold	Attenuation	string				
6	End Character	Message end character	binary	0x0d	CR	

4.3.9 AEC Setting Change Request

After receiving the AEC Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the AEC Setting Change Request from the host is shown below.

s_aec_general_S_0000_00_NC_2,1,,,0,,20,20,1,1,↓

Table 4-34 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_aec_general		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	AEC Enable	The presence or absence of AEC	string	0 1	Off On	
	AEC Reference	AEC Reference	string	0 1	AnalogInput Digital Input	
	Reference Level	Reference Level	string			Not used
	Send Reference	Send Reference	string			Not used
	AEC Sensitivity	AEC Sensitivity	string			Not used
	Bus Select	Bus Select	string			Not used
	Noise Canceling Attenuation Level					
	AEC	Attenuation level (AEC mode)	string			Not used
	Noise Canceling	Attenuation level (Noise Canceling mode)	string	0 to 20	0 to 20 dB	
	Non Linear Processing					
	Enable	Permission of Non Linear Processing	string	0 1	Off On	
	Sensitivity	Non Linear Processing Sensitivity	string	0 1 2	Low Mid High	

No	item	Description	type	value	value description	remarks
	AEC Status Apply	Saving of AEC parameters	string			Not used
	NC Enable	The presence or absence of NC	string	0	Off	
				1	On	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.10 AEC Setting Acquisition Request

After receiving the AEC Setting Acquisition Request, the ATND1061 sends the AEC settings to the host via Answer.

(1) Get Command

The command format of the AEC Setting Acquisition Request from the host is shown below.

g_aec_general_O_0000_00_NC_↓

Table 4-35 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_aec_general		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_aec_general_0000_00_NC_2,1,,,0,,20,20,1,1,↓

Table 4-36 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_aec_general		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	AEC Enable	The presence or absence of AEC	string	0 1	Off On	
	AEC Reference	AEC Reference	string	0 1	AnalogInput Digital Input	

No	item	Description	type	value	value description	remarks
	Reference Level	Reference Level	string			Not used
	Send Reference	Send Reference	string			Not used
	AEC Sensitivity	AEC Sensitivity	string			Not used
	Bus Select	Bus Select	string			Not used
	Noise Canceling Attenuation Level					
	AEC	Attenuation level (AEC mode)	string			Not used
	Noise Canceling	Attenuation level (Noise Canceling mode)	string	0 to 20	0 to 20 dB	
	Non Linear Processing					
	Enable	Permission of Non Linear Processing	string	0	Off	
				1	On	
	Sensitivity	Non Linear Processing Sensitivity	string	0	Low	
				1	Mid	
				2	High	
	AEC Status Apply	Saving of AEC parameters	string			Not used
	NC Enable	The presence or absence of NC	string	0	Off	
				1	On	
6	End Character	Message end character	binary	0x0d	CR	

4.3.11 AGC Setting Change Request

After receiving the AGC Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the AGC Setting Change Request from the host is shown below.

s_agc_S_0000_00_NC_1,,2↵

Table 4-37 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_agc		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Enable	Enable	string	0 1	Off On	
	Reserved	Reserved	string			
	Target Level	Target Level	string	-10 to 10	-10dB to 10dB	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.12 AGC Setting Acquisition Request

After receiving the AGC Setting Acquisition Request, the ATND1061 sends the AEC settings to the host via Answer.

(1) Get Command

The command format of the AGC Setting Acquisition Request from the host is shown below.

g_agc_O_0000_00_NC_↓

Table 4-38 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_agc		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_agc_0000_00_NC_1,,2_↵

Table 4-39 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_agc		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Enable	Enable	string	0 1	Off On	
	Reserved	Reserved	string			
	Target Level	Target Level	string	-10 to 10	-10dB to 10dB	
6	End Character	Message end character	binary	0x0d	CR	

4.3.13 Gain Share Mode Change Request

After receiving the Gain Share Mode Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Gain Share Mode Change Request from the host is shown below.

s_gainshare_mode_S_0000_00_NC_1_↓

Table 4-40 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_gainshare_mode		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	string	0	Standalone	
				1	Link	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.3.14 Gain Share Mode Acquisition Request

After receiving the Gain Share Mode Acquisition Request, the ATND1061 sends the AEC settings to the host via Answer.

(1) Get Command

The command format of the Gain Share Mode Acquisition Request from the host is shown below.

g_gainshare_mode_O_0000_00_NC_↓

Table 4-41 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_gainshare_mode		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_gainshare_mode_0000_00_NC_1_↓

Table 4-42 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_gainshare_mode		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
		Mode	Mode	string	0 1	Standalone Link
6	End Character	Message end character	binary	0x0d	CR	

4.4 Output Command Details

4.4.1 Output Level Setting Change Request

After receiving the Output Level Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Output Level Setting Change Request from the host is shown below.

```
s_output_level_S_0000_00_NC_0,511,,,,_↓
```

Table 4-43 Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	s_output_level			
2	HandShake Select	Sequence execution method	string	S			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Not used	string	00	Not used		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter					
	Output Channel Select	Output channel selection	string	0	Analog Out		
				1	Auto Mix		
	Level	Level	string	0 to 511	-120dB to +10dB	See 6.1 Fader Table.	
	Max Volume					Not used	
	Enable	On/Off	string				
	Value	Volume	string				
	Min Volume					Not used	
	Enable	On/Off	string				
	Value	Volume	string				
7	End Character	Message end character	binary	0x0d	CR		

(2) ACK/NAK

See Factory Default Setting Request (2).

4.4.2 Output Level Setting Acquisition Request

After receiving the Output Level Setting Acquisition Request, the ATND1061 sends output settings to the host via Answer.

(1) Get Command

The command format of the Output Level Setting Acquisition Request from the host is shown below.

g_output_level_O_0000_00_NC_0_↵

Table 4-44 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_output_level		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Output Channel Select	Parameter Output channel selection	string	0	Analog Out	
				1	Auto Mix	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_output_level_0000_00_NC_0,511,,,,_↓

Table 4-45 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_output_level		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
	Level	Level	string	0 to 511	-120dB to +10dB	See 6.1 Fader Table.
	Max Volume					Not used
	Enable	On/Off	string			
	Value	Volume	string			
	Min Volume					Not used
	Enable	On/Off	string			
	Value	Volume	string			
6	End Character	Message end character	binary	0x0d	CR	

4.4.3 Output Channel Mute Setting Change Request

After receiving the Output Channel Mute Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Output Channel Mute Setting Change Request from the host is shown below.

s_output_mute_S_0000_00_NC_0,1_↓

Table 4-46 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_output_mute		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
			Output Channel Select	Output channel selection	string	0
				1	Auto Mix	
	Mute	Mute	string	0	Without muting	
			1	With muting		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.4.4 Output Channel Mute Setting Acquisition Request

After receiving the Output Channel Mute Setting Acquisition Request, the ATND1061 sends output settings to the host via Answer.

(1) Get Command

The command format of the Output Channel Mute Setting Acquisition Request from the host is shown below.

g_output_mute_O_0000_00_NC_0_↓

Table 4-47 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_output_mute		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Output Channel Select	Parameter Output channel selection	string	0	Analog Out	
				1	Auto Mix	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_output_mute_0000_00_NC_0,1_↓

Table 4-48 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_output_mute		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
	Mute	Mute	string	0	Without muting	
				1	With muting	
6	End Character	Message end character	binary	0x0d	CR	

4.4.5 Output Channel Setting Change Request

After receiving the Output Channel Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Output Channel Setting Change Request from the host is shown below.

s_output_channel_settings_S_0000_00_NC_0,3,"OUT 1",,,,,

Table 4-49 Command Format

No	item	Description	type	value	value description	remarks			
1	Command	Command string	string	s_output_channel_settings					
2	HandShake Select	Sequence execution method	string	S					
3	Model ID	Not used	string	0000	Not used				
4	Unit No	Not used	string	00	Not used				
5	Continue Select	Message split method	string	NC	No split				
6	Parameter	Parameter							
		Output Channel Select	Output channel selection	string	0	Analog Out			
					1	Auto Mix			
		Unity	Unity	string	0	+4dBu			
					2	-10dBv			
					3	-33dBv			
		Name	Channel name	char	"	Beginning of character string			
						string	ASCII code	Name	To contain double quotation marks ("), specify them in succession like "".
						char	"	End of character string	
	Color	Channel color	string			Not used			
	Link	Link	string			Not used			
	Source	Input source	string			Not used			
	Fader Group	Fader Group	string			Not used			
7	End Character	Message end character	binary	0x0d	CR				

(2) ACK/NAK

See Factory Default Setting Request (2).

4.4.6 Output Channel Setting Acquisition Request

After receiving the Output Channel Setting Acquisition Request, the ATND1061 sends output settings to the host via Answer.

(1) Get Command

The command format of the Output Channel Setting Acquisition Request from the host is shown below.

g_output_channel_settings_O_0000_00_NC_0_↓

Table 4-50 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_output_channel_settings		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

`g_output_channel_settings_0000_00_NC_0,3,"OUT 1",FFFFFF,1,13_↵`

Table 4-51 Answer Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	g_output_channel_settings			
2	Model ID	Not used	string	0000	Not used		
3	Unit No	Device ID	string	00 to FF	Device ID		
4	Continue Select	Message split method	string	NC	No split		
5	Parameter	Parameter					
	Output Channel Select	Output channel selection	string	0	Analog Out		
				1	Auto Mix		
	Unity	Unity	string	0	+4dBu		
				2	-10dBv		
				3	-33dBv		
	Name	Channel name	char	"	Beginning of character string		
				string	ASCII code	Name	To contain double quotation marks ("), specify them in succession like "".
				char	"	End of character string	
	Color	Channel color	string			Not used	
	Link	Link	string			Not used	
Source	Input source	string			Not used		
Fader Group	Fader Group	string			Not used		
6	End Character	Message end character	binary	0x0d	CR		

4.5 System Command Details

4.5.1 Factory Default Setting Request

After receiving the Factory Default Setting Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Factory Default Setting Request from the host is shown below.

```
factory_settings_S_0000_00_NC_0_↓
```

Table 4-52 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	factory_settings		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Reset Item	Reset items				
	All Setting to Default.	All settings	string	0	All Reset	Optional
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

factory_settings_ACK_↓

Table 4-53 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	factory_settings		Sets the received Set/Get command
2	ACK	ACK	string	ACK		
3	End Character	Message end character	binary	0x0d	CR	

factory_settings_NAK_01_↓

Table 4-54 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	factory_settings		Sets the received Set/Get command
2	NAK	NAK	string	NAK		
3	Error Code	Error Codes	string	00 to 99	Error Codes	See Chapter 2.2.4.
4	End Character	Message end character	binary	0x0d	CR	

4.5.2 Permission Setting Change Request

After receiving the Permission Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Permission Setting Change Request from the host is shown below.

s_permission_S_0000_00_NC_"ATND1061",0,↓

Table 4-55 Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	s_permission			
2	HandShake Select	Sequence execution method	string	S			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Not used	string	00	Not used		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter					
	Device Name	Device name	char	"	Beginning of character string		
			string	ASCII code	Device name	To contain double quotation marks ("), specify them in succession like "".	
			char	"	End of character string		
	Administrator					Not used	
	Password require	Password requirement at login	string				
	password	Password	string				
	Operator					Not used	
	Password require	Password requirement at login	string				
	password	Password	string				
	Operator Access					Not used	
	Install Setting	Install setting permission	string				
	Logging	Logging permission	string				
	Preset	Presets permission	string				
	Conference	Start Conference & Setup Conference permission	string				
	maintenance	Setting maintenance	string				

No	item	Description	type	value	value description	remarks
		permission				
	System Info	System Info permission	string			
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.3 Permission Setting Acquisition Request

After receiving the Permission Setting Acquisition Request, the ATND1061 sends the permission settings to the host via Answer.

(1) Get Command

The command format of the Permission Setting Acquisition Request from the host is shown below.

g_permission_O_0000_00_NC_↵

Table 4-56 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_permission		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_permission_0000_00_NC_ "ATDM-1012",0,↵

Table 4-57 Answer Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	g_permission			
2	Model ID	Not used	string	0000	Not used		
3	Unit No	Device ID	string	00 to FF	Device ID		
4	Continue Select	Message split method	string	NC	No split		
5	Parameter	Parameter	string				
	Device Name	Device name	char	"	Beginning of character string		
			string	ASCII code	Device name	To contain double quotation marks ("), specify them in succession like "".	
			char	"	End of character string		
	Administrator						Not used
	Password require	Password requirement at login	string				
	password	Password	string				
	Operator						Not used
	Password require	Password requirement at login	string				
	password	Password	string				
	Operator Access						Not used
	Install Setting	Install setting permission	string				
	Logging	Logging permission	string				
	Preset	Presets permission	string				
	Conference	Start Conference & Setup Conference permission	string				
	maintenance	Setting maintenance permission	string				
	System Info	System Info permission	string				
6	End Character	Message end character	binary	0x0d	CR		

4.5.4 Network Setting Change Request

After receiving the Network Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

If the network settings are changed, the ATND1061 needs to be rebooted.

(1) Set Command

The command format of the Network Setting Change Request from the host is shown below.

s_network_S_0000_00_NC_1,192.168.033.102,255.255.000.000,,1,17300,1,1,239.000.000.100,17000,0,,,,0,,,,1

Table 4-58 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_network		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	IP setting					
	IP config mode	IP address resolution method	string	0	Auto	
				1	Static	
	IP address	IP address	string	000,000,000,000 to 255,255,255,255	IP address	
	Subnet mask	Subnet mask	string	000,000,000,000 to 255,255,255,255	Subnet mask	
	Gateway address	Default gateway	string	000,000,000,000 to 255,255,255,255	Default gateway	
	Allow Discovery	UPnP	string	0	Not detect	
				1	Detect	
	IP control setting					
	Port Number	TCP/IP port number	string	1 to 65535	Port number	
	Notification	The presence or absence of information transmission	string	0	Not use	
				1	Use	
	Audio Level Notification	The presence or absence of transmission of Audio Level information	string	0	Not use	
				1	Use	

No	item	Description	type	value	value description	remarks
		Multicast address	string	000,000,000,000 to 255,255,255,255	IP address	
		Multicast port number	string	1 to 65535	Port number	
	NTP setting					Not used
		Enabled	string	0 1	Not use Use	
		NTP server address	string	000,000,000,000 to 255,255,255,255	IP address	
		NTP port number	string	1 to 65535	Port number	
		Time Zone	string	-1200 to +1400	±HHMM (in units of 30 minutes)	
		Daylight saving time	string	0 1	Not use Use	
		Start Date	string	01010000 to 12312300	MMDDHHmm (Units: 1 hour)	
		End Date	string	01010000 to 12312300	MMDDHHmm (Units: 1 hour)	
	Auto Mode Change When Network Connection Lost					Not used
		Enabled	string			
		Hold time after network error	string			
	IP control setting					
		Camera Control Notification	string	0 1	Not use Use	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.5 Network Setting Acquisition Request

After receiving the Network Setting Acquisition Request, the ATND1061 sends the network settings to the host via Answer.

(1) Get Command

The command format of the Network Setting Acquisition Request from the host is shown below.

g_network_O_0000_00_NC_↵

Table 4-59 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_network		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

```
g_network_0000_00_NC_1,,,,0005CDC102FA,1,17300,1,1,239.000.000.100,17000,0,,,,0,,
,,,1_↵
```

Table 4-60 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_network		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	IP setting					
	IP config mode	IP address resolution method	string	0 1	Auto Static	
	IP address	IP address	string	000,000,000,000 to 255,255,255,255	IP address	
	Subnet mask	Subnet mask	string	000,000,000,000 to 255,255,255,255	Subnet mask	
	Gateway address	Default gateway	string	000,000,000,000 to 255,255,255,255	Default gateway	
	MAC address	MAC address	string	XXXXXXXXYYYYYY	MAC address	
	Allow Discovery	UPnP	string	0	Not detect	
				1	Detect	
	IP control setting					
	Port Number	TCP/IP port number	string	1 to 65535	Port number	
	Notification	The presence or absence of information transmission	string	0	Not use	
				1	Use	
	Audio Level Notification	The presence or absence of transmission of Audio Level information	string	0	Not use	
				1	Use	

No	item	Description	type	value	value description	remarks	
		Multicast address	Multicast group address	string	000,000,000,000 to 255,255,255,255	IP address	
		Multicast port number	Multicast port number	string	1 to 65535	Port number	
	NTP setting						Not used
		Enabled	NTP use	string	0 1	Not use Use	
		NTP server address	NTP server address	string	000,000,000,000 to 255,255,255,255	IP address	
		NTP port number	NTP server port number	string	1 to 65535	Port number	
		Time Zone	Difference from GMT	string	-1200 to +1400	±HHMM (in units of 30 minutes)	
		Daylight saving time	Daylight saving time	string	0 1	Not use Use	
		Start Date	Start date of daylight saving time	string	01010000 to 12312300	MMDDHHmm (Units: 1 hour)	
		End Date	End date of daylight saving time	string	01010000 to 12312300	MMDDHHmm (Units: 1 hour)	
	Auto Mode Change When Network Connection Lost						Not used
		Enabled	Conference mode automatic change	string			
		Hold time after network error	Judgment time for conference mode automatic change	string			
	IP control setting						
		Camera Control Notification	The presence or absence of transmission of Camera Control Notification	string	0 1	Not use Use	
6	End Character	Message end character	binary	0x0d	CR		

4.5.6 Dante Setting Change Request

After receiving the Dante Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK. If the Dante settings are changed, the ATND1061 needs to be rebooted.

(1) Set Command

The command format of the Dante Setting Change Request from the host is shown below.

```
s_network_dante_S_0000_00_NC_0,5,1,192.168.033.102,255.255.000.000,,,1,192.168.033.103,255.255.000.000,,↵
```

Table 4-61 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_network_dante		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Network Configuration					
	Mode	Mode	string	0	Single Cable	
				2	Split	
	Latency	Latency	string	1	250usec	
				2	500usec	
				3	1msec	
				4	2msec	
				5	5msec	
	Port Setting/Primary Primary settings					
	IP Config mode	IP address acquisition method	string	0	Auto	
				1	Static	
	IP address	IP address	string	000,000,000,000 to 255,255,255,255	IP address	
	Subnet mask	Subnet mask	string	000,000,000,000 to 255,255,255,255	Subnet mask	
	Gateway address	Default gateway	string	000,000,000,000 to	IP address	

No	item	Description	type	value	value description	remarks
				255,255,255,255		
	Reserved	Reserved	string			
	Port Setting/Secondary	Secondary settings				Same as Primary
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.7 Dante Setting Acquisition Request

After receiving the Dante Setting Acquisition Request, the ATND1061 sends the network settings to the host via Answer.

(1) Get Command

The command format of the Dante Setting Acquisition Request from the host is shown below.

```
g_network_dante_O_0000_00_NC_↓
```

Table 4-62 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_network_dante		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

```
g_network_dante_0000_00_NC_0,5,1,192.168.033.102,255.255.000.000,,,1,192.168.033
.103,255.255.000.000,,_↓
```

Table 4-63 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_network_dante		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Network Configuration					

No	item	Description	type	value	value description	remarks	
	Mode	Mode	string	0	Single Cable		
				2	Split		
	Latency	Latency	string	1	250usec		
				2	500usec		
				3	1msec		
				4	2msec		
				5	5msec		
	Port Setting/Primary		Primary settings				
	IP Config mode	IP address acquisition method	string	0	Auto		
				1	Static		
	IP address	IP address	string	000,000,000,000 to 255,255,255,255		IP address	
	Subnet mask	Subnet mask	string	000,000,000,000 to 255,255,255,255		Subnet mask	
	Gateway address	Default gateway	string	000,000,000,000 to 255,255,255,255		IP address	
	Reserved	Reserved	string				
Port Setting/Secondary		Secondary settings					
6	End Character	Message end character	binary	0x0d	CR		

4.5.8 Firmware Version Acquisition Request

After receiving the Firmware Version Acquisition Request, the ATND1061 sends the device firmware version to the host via Answer.

(1) Get Command

The command format of the Firmware Version Acquisition Request from the host is shown below.

g_firmware_version_O_0000_00_NC_↓

Table 4-64 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_firmware_version		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_firmware_version_0000_00_NC_01.00.00_↓

Table 4-65 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_firmware_version		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	version	Version	string	XX.XX.XX	Version	
6	End Character	Message end character	binary	0x0d	CR	

4.5.9 Device Color Setting Change Request

After receiving the Device Color Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Get Command

The command of the Device Color Setting Change Request from the host is shown below.

```
s_header_color_S_0000_00_NC_8_↓
```

Table 4-66 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_header_color		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Header Color	Parameter Header color	string	0	Green	
				1	Yellow	
				3	Red	
				4	Pink	
				5	Blue	
				8	Cyan	
				7	End Character	Message end character

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.10 Device Color Setting Acquisition Request

After receiving the Device Color Setting Acquisition Request, the ATND1061 sends the header color settings to the host via Answer.

(1) Get Command

The command of the Device Color Setting Acquisition Request from the host is shown below

g_header_color_O_0000_00_NC↵

Table 4-67 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_header_color		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_header_color_0000_00_NC_8_↓

Table 4-68 Answer Command Format

No	item	Description	type	value	value description	remarks		
1	Command	Command string	string	g_header_color				
2	Model ID	Not used	string	0000	Not used			
3	Unit No	Device ID	string	00 to FF	Device ID			
4	Continue Select	Message split method	string	NC	No split			
5	Parameter	Parameter	string					
				Header Color	Header color	0	Green	
						1	Yellow	
						3	Red	
						4	Pink	
						5	Blue	
				8	Cyan			
6	End Character	Message end character	binary	0x0d	CR			

4.5.11 Log Setting Change Request

After receiving the Log Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Log Setting Change Request from the host is shown below.

s_log_S_0000_00_NC_1,2_↓

Table 4-69 Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	s_log			
2	HandShake Select	Sequence execution method	string	S			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Not used	string	00	Not used		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter	string	0	Disable		
				1	Enable		
		Output destination	Output destination	string	0	Internal	
					2	Syslog	
7	End Character	Message end character	binary	0x0d	CR		

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.12 Log Setting Acquisition Request

After receiving the Log Setting Acquisition Request, the ATND1061 sends the log settings to the host via Answer.

(1) Get Command

The command format of the Log Setting Acquisition Request from the host is shown below.

g_log_O_0000_00_NC↵

Table 4-70 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_log		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_log_0000_00_NC_1,2_↓

Table 4-71 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_log		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Enabled	Log output	string	0	Disable	
				1	Enable	
	Output destination	Output destination	string	0	Internal	
2				Syslog		
6	End Character	Message end character	binary	0x0d	CR	

4.5.13 Log Setting Change Request

After receiving the Log Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Log Setting Change Request from the host is shown below.

s_led_S_0000_00_NC_1,4,10,10,10_↓

Table 4-72 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_led		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Dimmer	Dimmer	string	0	OFF	
				1	ON	
	Brightness	Brightness	string	1 to 4	Brightness when Dimmer is ON	Not used
	Power Save Mode	LED color when in Power Save mode	string	0	Black	
				1	Red	
				2	Orange	
				3	Yellow	
				4	Pink	
				5	Purple	
				6	Blue	
				7	Aqua	
				8	Green	
				9	Cyan	
	10	White				
	Mute	LED color when muting is in effect	string	0 to 10	Same as in Power Save mode	

No	item	Description	type	value	value description	remarks
	Unmute	LED color when muting is canceled	string	0 to 10	Same as in Power Save mode	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.14 LED Setting Acquisition Request

After receiving the LED Setting Acquisition Request, the ATND1061 sends the log settings to the host via Answer.

(1) Get Command

The command format of the LED Setting Acquisition Request from the host is shown below.

g_led_O_0000_00_NC↵

Table 4-73 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_led		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_led_0000_00_NC_4,9,0,5_↓

Table 4-74 Answer Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	g_led			
2	Model ID	Not used	string	0000	Not used		
3	Unit No	Device ID	string	00 to FF	Device ID		
4	Continue Select	Message split method	string	NC	No split		
5	Parameter	Parameter					
	Dimmer	Dimmer	string	0	OFF		
				1	ON		
	Brightness	Brightness	string	1 to 4		Brightness when Dimmer is ON	Not used
	Power Save Mode	LED color when in Power Save mode	string	0	Black		
				1	Red		
				2	Orange		
				3	Yellow		
				4	Pink		
				5	Purple		
				6	Blue		
				7	Aqua		
				8	Green		
9				Cyan			
10	White						
Mute	LED color when muting is in effect	string	0 to 10		Same as in Power Save mode		
Unmute	LED color when muting is canceled	string	0 to 10		Same as in Power Save mode		
6	End Character	Message end character	binary	0x0d	CR		

4.5.15 Preset Call Request

After receiving the Preset Call Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Preset Call Request from the host is shown below.

```
call_preset_S_0000_00_NC_16_↵
```

Table 4-75 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	call_preset		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.16 Preset Save Request

After receiving the Preset Save Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Preset Save Request from the host is shown below.

```
save_preset_S_0000_00_NC_16_↵
```

Table 4-76 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	save_preset		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.17 Preset Bank Name Change Request

After receiving the Preset Bank Name Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Preset Bank Name Change Request from the host is shown below.

s_name_bank_S_0000_00_NC_16,"preset 16"↵

Table 4-77 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_name_bank		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
	Name	Bank name	char	"	Beginning of character string	
			string	ASCII code	Bank name	To contain double quotation marks ("), specify them in succession like "".
		char	"	End of character string		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.18 Preset Bank Name Acquisition Request

After receiving the Preset Bank Name Acquisition Request, the ATND1061 sends the Preset Bank Name Acquisition Request to the host via Answer.

(1) Get Command

The command format of the Preset Bank Name Acquisition Request from the host is shown below.

g_name_bank_O_0000_00_NC_↓

Table 4-78 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_name_bank		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_name_bank_0000_00_CS_1,"preset 1"↵

g_name_bank_0000_00_CM_2,"preset 2"↵

⋮

g_name_bank_0000_00_CM_15,"preset 15"↵

g_name_bank_0000_00_CE_16,"preset 16"↵

Table 4-79 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_name_bank		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	CS/CM/CE	Split	
5	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
	Name	Bank name	char	"	Beginning of character string	
			string	ASCII code	Bank name	To contain double quotation marks ("), specify them in succession like "".
char	"	End of character string				
6	End Character	Message end character	binary	0x0d	CR	

4.5.19 Boot Up Preset Setting Change Request

After receiving the Boot Up Preset Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Boot Up Preset Setting Change Request from the host is shown below.

s_bootup_preset_ S_0000_00_NC_16_↓

Table 4-80 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_bootup_preset		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	string	0	Not select	
				1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.20 Boot Up Preset Setting Acquisition Request

After receiving the Boot Up Preset Setting Acquisition Request, the ATND1061 sends the log settings to the host via Answer.

(1) Get Command

The command format of the Boot Up Preset Setting Acquisition Request from the host is shown below.

g_bootup_preset_O_0000_00_NC_↵

Table 4-81 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_bootup_preset		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_bootup_preset_0000_00_NC_16_↵

Table 4-82 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_bootup_preset		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Bank Number	Bank number	string	0 1 to 16	Not select Bank 1 to 16	
6	End Character	Message end character	binary	0x0d	CR	

4.5.21 File Transfer Request

After receiving the File Transfer Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the File Transfer Request from the host is shown below.

```
file_transfer_S_0000_00_CS_p1,00000400,1024,[binary data]↵
```

```
file_transfer_S_0000_00_CM_p1,00000800,1024,[binary data]↵
```

⋮

```
file_transfer_S_0000_00_CM_p1,00001000,1024,[binary data]↵
```

```
file_transfer_S_0000_00_CE_p1,00001400,256,[binary data]↵
```

Table 4-83 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	file_transfer		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC/CS/CM/CE	Split	
6	Parameter	Parameter				
	Kind	Transfer data type	string	See 6.6 Transfer data type.		
	File Offset	Offset	string	00000000 to FFFFFFFF	Specify the offset in the transfer file in HEX. Do not add "0x". A value obtained with ftell (FILE*)	
	Size	Size	string	0001 to 1024	Specify the number of bytes of transfer data in DEC.	
	Data	Transfer data	binary	-	Specify the transfer data in binary.	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.22 File Transfer Cancel Request

After receiving the File Transfer Cancel Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the File Transfer Cancel Request from the host is shown below.

```
file_transfer_cancel_S_0000_00_NC_p1_↵
```

Table 4-84 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	file_transfer_cancel		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC/CS/CM/CE	Split	
6	Parameter	Parameter				
	Kind	Transfer data type	string	See 6.6 Transfer data type.		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.23 Export Request

After receiving the Export Request, the ATND1061 sends specified data to the host via ACK or NAK.

(1) Get Command

The command format of the Export Request from the host is shown below.

```
export_O_0000_00_NC_p1_↵
```

Table 4-85 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	export		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Kind	Transfer data type	string	See 6.6 Transfer data type.		
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

```
export_0000_00_CS_p1,00000400,1024,[binary data]_↵
export_0000_00_CM_p1,00000800,1024,[binary data]_↵
.
.
export_0000_00_CM_p1,00001000,1024,[binary data]_↵
export_0000_00_CE_p1,00001400,256,[binary data]_↵
```

Table 4-86 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	export		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC/CS/CM/CE	Split	
5	Parameter	Parameter				
	Kind	Transfer data type	string	See 6.6 Transfer data type.		
	File Offset	Offset	string	00000000 to FFFFFFFF	Specify the offset in the transfer file in HEX. Do not add "0x". A value obtained with ftell (FILE*)	
	Size	Size	string	0001 to 1024	Specify the number of bytes of transfer data in DEC.	
	Data	Transfer data	binary	-	Specify the transfer data in binary.	
6	End Character	Message end character	binary	0x0d	CR	

4.5.24 Import Request

After receiving the Import Request, the ATND1061 sends the processing results to the host via ACK or NAK.

After Import Request, use the File Transfer Request command for transfer data.

(1) Set Command

The command format of the Import Request from the host is shown below.

```
import_S_0000_00_NC_p1_↵
```

Table 4-87 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	import		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Kind	Transfer data type	string	See 6.6 Transfer data type.		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.25 Level Meter Notification Interval Change Request

After receiving the Level Meter Notification Interval Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Get Command

The command format of the Level Meter Notification Interval Change Request from the host is shown below.

```
s_level_meter_interval,S,0000,00,NC,100,↵
```

Table 4-88 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_level_meter_interval		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Interval	Notification interval	string	100 to 300000	msec	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.26 Level Meter Notification Interval Acquisition Request

After receiving the Level Meter Notification Interval Acquisition Request, the ATND1061 sends the Level Meter settings to the host via Answer.

(1) Get Command

The command format of the Level Meter Notification Interval Acquisition Request from the host is shown below.

g_level_meter_interval_O_0000_00_NC_↵

Table 4-89 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_level_meter_interval		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_level_meter_interval_0000_00_NC_100_↵

Table 4-90 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_level_meter_interval		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Interval	Notification interval	string	100 to 300000	msec	
6	End Character	Message end character	binary	0x0d	CR	

4.5.27 Talker Position Interval Change Request

After receiving the Talker Position Interval Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Get Command

The command format of the Talker Position Interval Change Request from the host is shown below.

s_camera_control_interval_S_0000_00_NC_100_↵

Table 4-91 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_camera_control_interval		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Interval	Notification interval	string	100 to 300000	msec	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.28 Talker Position Interval Acquisition Request

After receiving the Talker Position Interval Acquisition Request, the ATND1061 sends the Level Meter settings to the host via Answer.

(1) Get Command

The command format of the Talker Position Interval Acquisition Request from the host is shown below.

g_camera_control_interval_O_0000_00_NC_↵

Table 4-92 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_control_interval		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below.

g_talkerposition_interval_0000_00_NC_100_↵

Table 4-93 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_talkerposition_interval		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Interval	Notification interval	string	100 to 300000	msec	
6	End Character	Message end character	binary	0x0d	CR	

4.5.29 Identify Request

After receiving the Identify Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Identify Request from the host is shown below.

identify_S_0000_00_NC_↵

Table 4-94 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	identify		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.30 Date Setting Request

After receiving the Date Setting Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Date Setting Request from the host is shown below.

s_date_S_0000_00_NC_20190711145000_↓

Table 4-95 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_date		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Timestamp	Timestamp	string	YYYYMMDDHHMMSS	Date (four-digit year)	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.31 Reboot Request

Upon receiving Reboot Request, the ATND1061 reboots by itself.

(1) Set Command

The command format of the Reboot Request from the host is shown below.

```
reboot_S_0000_00_NC_↵
```

Table 4-96 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	reboot		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.32 Device ID Change Request

After receiving the Device ID Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(3) Set Command

The command format of the Device ID Change Request from the host is shown below.

```
s_deviceid_S_0000_00_NC_08_↵
```

Table 4-97 Command Format

No	item	Description	type	value	value description	remarks
8	Command	Command string	string	s_deviceid		
9	HandShake Select	Sequence execution method	string	S		
10	Model ID	Not used	string	0000	Not used	
11	Unit No	Not used	string	00	Not used	
12	Continue Select	Message split method	string	NC	No split	
13	Parameter	Parameter				
	Device ID	Device ID	string	00 to FF	Device ID	
14	End Character	Message end character	binary	0x0d	CR	

(4) ACK/NAK

See Factory Default Setting Request (2).

4.5.33 Device ID Acquisition Request

After receiving the Device ID Acquisition Request, the ATND1061 sends the header color settings to the host via Answer.

(3) Get Command

The command of the Device ID Acquisition Request from the host is shown below

```
g_deviceid_O_0000_00_NC_↓
```

Table 4-98 Command Format

No	item	Description	type	value	value description	remarks
8	Command	Command string	string	g_deviceid		
9	HandShake Select	Sequence execution method	string	O		
10	Model ID	Not used	string	0000	Not used	
11	Unit No	Not used	string	00	Not used	
12	Continue Select	Message split method	string	NC	No split	
13	Parameter	Parameter	-	-	No parameter	
14	End Character	Message end character	binary	0x0d	CR	

(4) Answer

The Answer command format from the ATND1061 is shown below

```
g_deviceid_0000_00_NC_08_↓
```

Table 4-99 Answer Command Format

No	item	Description	type	value	value description	remarks
7	Command	Command string	string	g_deviceid		
8	Model ID	Not used	string	0000	Not used	
9	Unit No	Device ID	string	00 to FF	Device ID	
10	Continue Select	Message split method	string	NC	No split	
11	Parameter	Parameter				
	Device ID	Device ID	string	00 to FF	Device ID	
12	End Character	Message end character	binary	0x0d	CR	

4.5.34 Preset Number Acquisition Request

After receiving the Preset Number Acquisition Request, the ATND1061 sends the preset bank number to the host via Answer.

(1) Get Command

The command of the Preset Number Acquisition Request from the host is shown below

g_preset_number_O_0000_00_NC_↓

Table 4-100 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_preset_number		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_preset_number_0000_00_NC_16_↓

Table 4-101 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_preset_number		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
6	End Character	Message end character	binary	0x0d	CR	

4.5.35 External Control Setting Change Request

After receiving the External Control Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the External Control Setting Change Request from the host is shown below.

s_remotecontrol_S_0000_00_NC_1,1,1,2,2_↓

Table 4-102 Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	s_remotecontrol			
2	HandShake Select	Sequence execution method	string	S			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Not used	string	00	Not used		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter					
	Remote Controller				IR remote controller setting		
	Power	Power Save Mode	string	0	Not use		
				1	Use		
	Mute	Mute	string	0	Not use		
				1	Use		
	Preset	Preset Recall Link	string	0	Not use		
				1	Use		
	GPI					GPI setting	
	Port 1	GPI port 1	string	0	Power Save Mode		
				1	Mute		
				2	Reboot		

No	item	Description	type	value	value description	remarks
				3	Camera Control	
	Port 2	GPI port 2	string	0 to 3		Same as GPI Port 1
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.36 External Control Setting Acquisition Request

After receiving the External Control Setting Acquisition Request, the ATND1061 sends the header color settings to the host via Answer.

(1) Get Command

The command of the External Control Setting Acquisition Request from the host is shown below

g_remotecontrol_O_0000_00_NC_↓

Table 4-103 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_remotecontrol		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_remotecontrol_0000_00_NC_1,1,1,2,2_↓

Table 4-104 Answer Command Format

No	item	Description	type	value	value description	remarks	
1	Command	Command string	string	g_remotecontrol			
2	Model ID	Not used	string	0000	Not used		
3	Unit No	Device ID	string	00 to FF	Device ID		
4	Continue Select	Message split method	string	NC	No split		
5	Parameter	Parameter					
	Remote Controller					IR remote controller setting	
		Power	Power Save Mode	string	0	Not use	
					1	Use	
		Mute	Mute	string	0	Not use	
	1				Use		
	Preset	Preset Recall Link	string	0	Not use		
				1	Use		
	GPI					GPI setting	
	Port 1	GPI port 1	string	0	Power Save Mode		
				1	Mute		
				2	Reboot		
				3	Camera Control		
Port 2	GPI port 2	string	0 to 3		Same as GPI Port 1		
6	End Character	Message end character	binary	0x0d	CR		

4.5.37 Device Interlock Setting Change Request

After receiving the Device Interlock Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Device Interlock Setting Change Request from the host is shown below.

s_synccontrol_S_0000_00_NC_1,1,1,,↵

Table 4-105 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_synccontrol		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Power	Power Save Mode	string	0	Not interlocked	
				1	Interlocked	
	Mute	Mute	string	0	Not interlocked	
				1	Interlocked	
	Preset	Preset Recall Link	string	0	Not interlocked	
1				Interlocked		
Reserved	Reserved	string				
Reserved	Reserved	string				
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.38 Device Interlock Setting Acquisition Request

After receiving the Device Interlock Setting Acquisition Request, the ATND1061 sends the header color settings to the host via Answer.

(1) Get Command

The command of the Device Interlock Setting Acquisition Request from the host is shown below

g_synccontrol_O_0000_00_NC_↵

Table 4-106 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_synccontrol		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_synccontrol_0000_00_NC_1,1,1,0,0_↵

Table 4-107 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_synccontrol		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Power	Power Save Mode	string	0	Not interlocked	
				1	Interlocked	
	Mute	Mute	string	0	Not interlocked	
				1	Interlocked	
	Preset	Preset Recall Link	string	0	Not interlocked	
				1	Interlocked	
Reserved	Reserved	string	0 (fixed)			
Reserved	Reserved	string	0 (fixed)			
6	End Character	Message end character	binary	0x0d	CR	

4.5.39 Audio System Setting Change Request

After receiving the Audio System Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Audio System Setting Change Request from the host is shown below.

s_audio_system_S_0000_00_NC,,,,,1,2,1,28,100_↓

Table 4-108 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_audio_system		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Gain Unit Type	Gain unit	string			Not used
	Delay Unit Type	Delay unit	string			Not used
	Input EQ/DYN	EQ/Dyn indication setting for the input channel	string			Not used
	Virtual Mic Mode	Virtual Mic mode	string			Not used
	Tx6	Dante Tx#6 Signal	string	0	Automix	
				1	Separate 5	
	Beam Sensitivity	Beam Sensitivity	string	0	Low	
				1	Mid	
				2	High	
	Auto Attenuation	Auto Attenuation	string	0	Disable	
				1	Enable	
	Attenuation Level	Attenuation Level	string	0 to 28	-∞, -30 to -3 dB	See 6.7 Attenuation Level Table.
	Hold Time	Hold Time	string	0 to 100	0 to 10sec	0.1step
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.40 Audio System Setting Acquisition Request

After receiving the Audio System Setting Acquisition Request, the ATND1061 sends the audio system settings to the host via Answer.

(1) Get Command

The command of the Audio System Setting Acquisition Request from the host is shown below

g_audio_system_O_0000_00_NC_↵

Table 4-109 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_audio_system		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter	-	-	No parameter	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_audio_system_0000_00_NC,,,,,1,2,1,28,100_↓

Table 4-110 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_audio_system		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Gain Unit Type	Gain unit	string			Not used
	Delay Unit Type	Delay unit	string			Not used
	Input EQ/DYN	EQ/Dyn indication setting for the input channel	string			Not used
	Virtual Mic Mode	Virtual Mic mode	string			Not used
	Tx6	Dante Tx#6 Signal	string	0	Automix	
				1	Separate 5	
	Beam Sensitivity	Beam Sensitivity	string	0	Low	
				1	Mid	
				2	High	
Auto Attenuation	Auto Attenuation	string	0	Disable		
			1	Enable		
Attenuation Level	Attenuation Level	string	0 to 28	-∞, -30 to -3 dB	See 6.7 Attenuation Level Table.	
Hold Time	Hold Time	string	0 to 100	0 to 10sec	0.1step	
6	End Character	Message end character	binary	0x0d	CR	

4.5.41 Power Save Mode Request

Upon receiving Power Save Mode Request, the ATND1061 reboots by itself.

(1) Set Command

The command format of the Power Save Mode Request from the host is shown below.

s_powersave_S_0000_00_NC_1_↵

Table 4-111 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_powersave		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter mode	Parameter Power Save Mode	-	-	No parameter	
				0	Power save mode is canceled.	
				1	Power save mode is enabled.	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.42 Device Mute Request

After receiving the Device Mute Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Device Mute Request from the host is shown below.

s_mute_S_0000_00_NC_1_↓

Table 4-112 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_mute		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Mute	Mute	string	0 1	Without muting With muting	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.5.43 Device Mute Status Acquisition Request

After receiving the Device Mute Status Acquisition Request, the ATND1061 sends the device mute status to the host via Answer.

(1) Set Command

The command format of the Device Mute Status Acquisition Request from the host is shown below.

g_mute_O_0000_00_NC_↵

Table 4-113 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_mute		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_mute_0000_00_NC_1_↓

Table 4-114 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_audio_system		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Mute	Mute	string	0 1	Without muting With muting	
6	End Character	Message end character	binary	0x0d	CR	

4.6 Camera Command Details

4.6.1 Camera Device Setting Change Request

After receiving the Camera Device Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Camera Device Setting Change Request from the host is shown below.

```
s_camera_device_S_0000_00_NC_1,1,192.168.000.010,80_↓
```

Table 4-115 Command Format

No	Item	Description	type	Value	value description	remarks
1	Command	Command string	string	s_camera_device		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Device No.	Device number	string	1	Camera number	
	Enable	Used or not	string	0	Not use	
				1	Use	
	IP address	IP address	string	000,000,000,000 to 255,255,255,255	IP address	
	Port Number	Port number	string	1 to 65535	Port number	
Protocol	Protocols	string	0	Panasonic		
			1	VISCA over IP		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.6.2 Camera Device Setting Acquisition Request

After receiving the Camera Device Setting Acquisition Request, the ATND1061 sends the camera device settings to Host via Answer.

(1) Set Command

The command format of the Camera Device Setting Acquisition Request from the host is shown below.

g_camera_device_O_0000_00_NC_1_↓

Table 4-116 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_device		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
	Device No.	Device number	string	1	Camera number	
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_camera_device_0000_00_NC_1,1,192.168.000.010,80_↓

Table 4-117 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_device		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Device No.	Device number	string	1	Camera number	
	Enable	Used or not	string	0	Not use	
				1	Use	
	IP address	IP address	string	000,000,000,000 to 255,255,255,255	IP address	
	Port Number	Port number	string	1 to 65535	Port number	
Protocol	Protocols	string	0	Panasonic		
			1	VISCA over IP		
6	End Character	Message end character	binary	0x0d	CR	

4.6.3 Camera Preset Setting Change Request

After receiving the Camera Preset Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Camera Preset Setting Change Request from the host is shown below.

s_camera_preset_S_0000_00_NC_HOME,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15 ↵

Table 4-118 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_camera_preset		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	HOME	Position for silent	string	HOME 1 to 100	HOME Position Preset1 to Preset100	
	Group1	Position for Group1	string	1 to 100	Preset1 to Preset100	
	Group2	Position for Group2				Same as Group 1
	Group3	Position for Group3				Same as Group 1
	Group4	Position for Group4				Same as Group 1
	Group5	Position for Group5				Same as Group 1
	Group6	Position for Group6				Same as Group 1
	Group7	Position for Group7				Same as Group 1
	Group8	Position for Group8				Same as Group 1
	Group9	Position for Group9				Same as Group 1
	Group10	Position for Group10				Same as Group 1
	Group11	Position for Group11				Same as Group 1
	Group12	Position for Group12				Same as Group 1
	Group13	Position for Group13				Same as Group 1
	Group14	Position for Group14				Same as Group 1
Group15	Position for Group15				Same as Group 1	

No	item	Description	type	value	value description	remarks
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.6.4 Camera Preset Setting Acquisition Request

After receiving the Camera Preset Setting Acquisition Request, the ATND1061 sends the camera preset settings to Host via Answer.

(1) Set Command

The command format of the Camera Preset Setting Acquisition Request from the host is shown below.

g_camera_preset_O_0000_00_NC_↵

Table 4-119 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_preset		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

`g_camera_preset,0000,00,NC,HOME,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,`

Table 4-120 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_preset		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	HOME	Position for silent	string	HOME 1 to 100	HOME Position Preset1 to Preset100	
	Group1	Position for Group1	string	1 to 100	Preset1 to Preset100	
	Group2	Position for Group2				Same as Group 1
	Group3	Position for Group3				Same as Group 1
	Group4	Position for Group4				Same as Group 1
	Group5	Position for Group5				Same as Group 1
	Group6	Position for Group6				Same as Group 1
	Group7	Position for Group7				Same as Group 1
	Group8	Position for Group8				Same as Group 1
	Group9	Position for Group9				Same as Group 1
	Group10	Position for Group10				Same as Group 1
	Group11	Position for Group11				Same as Group 1
	Group12	Position for Group12				Same as Group 1
	Group13	Position for Group13				Same as Group 1
	Group14	Position for Group14				Same as Group 1
Group15	Position for Group15				Same as Group 1	
6	End Character	Message end character	binary	0x0d	CR	

4.6.5 Camera Control Time Setting Change Request

After receiving the Camera Control Time Setting Change Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Camera Control Time Setting Change Request from the host is shown below.

s_camera_control_S_0000_00_NC_10000,1,100000_↵

Table 4-121 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_camera_control		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Time to Recall Preset	Time to Recall Preset	string	500 to 10000	msec	
	Enable go back Home	Enable go back Home	string	0	Not use	
				1	Use	
Time to go back Home	Time to go back Home	string	500 to 100000	msec		
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

4.6.6 Camera Control Time Setting Acquisition Request

After receiving the Camera Control Time Setting Acquisition Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Camera Control Time Setting Acquisition Request from the host is shown below.

g_camera_control_O_0000_00_NC_↓

Table 4-122 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_control		
2	HandShake Select	Sequence execution method	string	O		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter		-	-	None
7	End Character	Message end character	binary	0x0d	CR	

(2) Answer

The Answer command format from the ATND1061 is shown below

g_camera_control_0000_00_NC_10000,1,10000_↵

Table 4-123 Answer Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	g_camera_control		
2	Model ID	Not used	string	0000	Not used	
3	Unit No	Device ID	string	00 to FF	Device ID	
4	Continue Select	Message split method	string	NC	No split	
5	Parameter	Parameter				
	Time to Recall Preset	Time to Recall Preset	string	500 to 10000	msec	
	Enable go back Home	Enable go back Home	string	0	Not use	
				1	Use	
Time to go back Home	Time to go back Home	string	500 to 100000	msec		
6	End Character	Message end character	binary	0x0d	CR	

4.6.7 Camera Control Pause Request

After receiving the Camera Control Pause Request, the ATND1061 sends the processing results to the host via ACK or NAK.

(1) Set Command

The command format of the Camera Control Pause Request from the host is shown below.

s_camera_stop_S_0000_00_NC_1_↓

Table 4-124 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	s_camera_stop		
2	HandShake Select	Sequence execution method	string	S		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Not used	string	00	Not used	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter Stop	Parameter Presence/absence of pause control	string	0	Unpause	
				1	Pause	
7	End Character	Message end character	binary	0x0d	CR	

(2) ACK/NAK

See Factory Default Setting Request (2).

5 UDP Communications

The information (status change notification) from the ATND1061 is sent via UDP protocol.

5.1 Communication Control

For details on the communication control flow, see Chapter 4.1.

5.1.1 Communication Start

The host registers groups to the multicast address.

Table 5-1 Communication Control Parameters

No	Name	Default Setting	Remarks
1.	IPAddress	239.000.000.100	Multicast address
2.	Port No	17000	

5.1.2 Control Sequence

5.1.2.1 Information

If the ATND1061 status changes, a status change notification is sent.

<Example> The sequence of conference status notification is shown below.

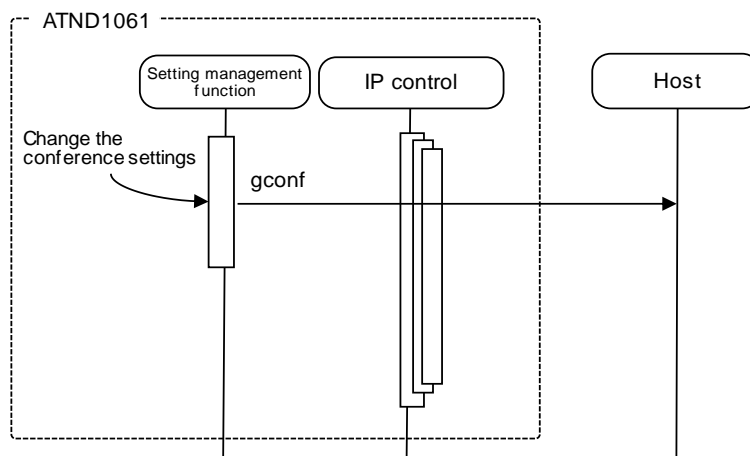


Figure 5-1 Information Command Processing Sequence

5.1.3 Communication Errors

For details on the sequence for transmission errors, see 4.1.3.1.

5.1.4 Communication End

The host can unregister groups at any timing.

5.2 Command Details

5.2.1 Level Meter Notice

A Level Meter Notice is sent periodically from the ATND1061.

It is reported at the interval set in the Level Meter Notification Interval Change Request. (The default is 100 msec.)

It is not sent when IP Control Setting-Audio Level Notification is 0 (not used) in the network setting.

MD_level_meter_notice_0000_00_NC_1,2,3,4,5,6,1,,,,,1,2,,,,,,1,,,,,,1,2,3,4,5,

6,,,,_↓

Table 5-2 Command Format

No	item	Description	type	value	value description	remarks
1	Modify	MD	string	MD		
2	Command	Command string	string	level_meter_notice		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Post Fader Meter					
	Level 0	Beam Channel 1	string	0 to 61	Level Meter of Beam Channel 1	
	Level 1	Beam Channel 2	string	0 to 61	Level Meter of Beam Channel 2	
	Level 2	Beam Channel 3	string	0 to 61	Level Meter of Beam Channel 3	
	Level 3	Beam Channel 4	string	0 to 61	Level Meter of Beam Channel 4	
	Level 4	Beam Channel 5	string	0 to 61	Level Meter of Beam Channel 5	
	Level 5	Beam Channel 6	string	0 to 61	Level Meter of Beam Channel 6	
	Level 6	Analog Input	string	0 to 61		
	Level 7		string			
	Level 8		string			
	Level 9		string			
	Level 10		string			
	Level 11		string			
	Level 12	Analog Out	string	0 to 61	Level Meter of Analog Output	

No	item	Description	type	value	value description	remarks
	Level 13	Auto Mix	string	0 to 61	Level Meter of Auto Mix	
	Level 14					
	Level 15					
	Level 16					
	Level 17					
	Level 18					
	Level 19					
	Level 20					
	Level 21					
AEC(ERL) Meter						
	Level 22	AEC(ERL)	string	0 to 60	Level Meter of AEC (ERL)	
	Level 23					
	Level 24					
	Level 25					
	Level 26					
	Level 27					
	Level 28					
	Level 29					
	Level 30					
	Level 31					
Gainshare Meter						
	Level 32	Beam Channel 1	string	0 to 15	Level Meter of Beam Channel 1	
	Level 33	Beam Channel 2	string	0 to 15	Level Meter of Beam Channel 2	
	Level 34	Beam Channel 3	string	0 to 15	Level Meter of Beam Channel 3	
	Level 35	Beam Channel 4	string	0 to 15	Level Meter of Beam Channel 4	
	Level 36	Beam Channel 5	string	0 to 15	Level Meter of Beam Channel 5	
	Level 37	Beam Channel 6	string	0 to 15	Level Meter of Beam Channel 6	
	Level 38					
	Level 39					
	Level 40					
	Level 41					

No	item	Description	type	value	value description	remarks
7	End Character	Message end character	binary	0x0d	CR	

5.2.2 Input Gain Level Setting Notice

When the Gain&Level setting of the input channel is changed from the ATND1061, an Input Gain Level Setting Notice will be sent. It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_input_gain_level_notice_0000_00_NC_6,40,40,511,1_↓

Table 5-3 Command Format

No	item	Description	type	value	value description	remarks	
1	Modify	MD	string	MD			
2	Command	Command string	string	input_gain_level_notice			
3	Model ID	Not used	string	0000	Not used		
4	Unit No	Device ID	string	00 to FF	Device ID		
5	Continue Select	Message split method	string	NC	No split		
6	Parameter	Parameter					
	Input Channel Select	Input channel selection	string	0 to 5	Input Channel 1 to 6		
				6	Analog		
	gain						
	Mic	Mic gain	string	0 to 40		+20dB to +60dB	See 6.5 Input Gain Table.
				0 to 40		-20dBu to -60dBu	See 6.5 Input Gain Table.
	Line	Line gain	string	0 to 40		-20dBu to -60dBu	See 6.5 Input Gain Table.
Level	Level	string	0 to 511		-120dB to +10dB	See 6.1 Fader Table.	
Mute	Mute	string	0		Without muting		
			1		With muting		
7	End Character	Message end character	binary	0x0d	CR		

5.2.3 Output Level Setting Notice

When the level setting of the output channel is changed from the ATND1061, an Output Level Setting Notice will be sent.

It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_output_level_notice_0000_00_NC_0,511_↵

Table 5-4 Command Format

No	item	Description	type	value	value description	remarks
1	Modify	MD	string	MD		
2	Command	Command string	string	output_level_notice		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0 1	Analog Out Auto Mix	
	Level	Level	string	0 to 511	-120dB to +10dB	See 6.1 Fader Table.
7	End Character	Message end character	binary	0x0d	CR	

5.2.4 Output Channel Mute Setting Notice

When the mute setting of the output channel is changed from the ATND1061, an Output Channel Mute Setting Notice will be given. It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_output_mute_notice_0000_00_NC_0,1↵

Table 5-5 Command Format

No	item	Description	type	value	value description	remarks
1	Modify	MD	string	MD		
2	Command	Command string	string	output_mute_notice		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Output Channel Select	Output channel selection	string	0	Analog Out	
				1	Auto Mix	
	Mute	Mute	string	0	Without muting	
1				With muting		
7	End Character	Message end character	binary	0x0d	CR	

5.2.5 Preset Call Notice

Preset Call Notice is sent when a preset call is made from the ATND1061.

It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_recall_preset_notice_0000_00_NC_1_↵

Table 5-6 Command Format

No	item	Description	type	value	value description	remarks
1	Modify	MD	string	MD		
2	Command	Command string	string	recall_preset_notice		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Bank Number	Bank number	string	1 to 16	Bank 1 to 16	
7	End Character	Message end character	binary	0x0d	CR	

5.2.6 Talker Position

A Talker Position is sent periodically from the ATND1061.

It is reported at the interval set in the Talker Position Interval Change Request. (The default is 100 msec.)

It is not sent when IP Control Setting Camera Control Notification is 0 (not used) in the network setting.

MD_camera_control_notice_0000_00_NC_1,5,90,360,15↵

Table 5-7 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	camera_control_notice		
2	HandShake Select	Sequence execution method	string	0		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Status	Status	string	0	Not in a state of speaking	
				1	In a state of speaking	
	Channel	Channel	string	0 to 5	Beam Channel 1 to 6	Enabled when Status is 1
				Omitted	Out of range	
	Angle	Elevation angle	string	0 to 90		
	Rotate	Rotation angle	string	0 to 360		
CameraNo	Camera area number	string	0	No camera area		
			1 to 15	Camera area number		
7	End Character	Message end character	binary	0x0d	CR	

5.2.7 Power Save Mode Notice

When the status of power save mode of the ATND1061 is changed, Power Save Mode Notice will be sent.
It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_powersave_notice_0000_00_NC_1↵

Table 5-8 Command Format

No	item	Description	type	value	value description	remarks
1	Command	Command string	string	powersave_notice		
2	HandShake Select	Sequence execution method	string	0		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	mode	Power Save Mode	string	0	Power save mode canceled	
				1	Power save mode	
7	End Character	Message end character	binary	0x0d	CR	

5.2.8 Device Mute Notice

When the device mute status is changed from the ATND1061, Device Mute Notice will be given.
It is not sent when IP Control Setting Notification is 0 (not used) in the network setting.

MD_mute_notice_0000_00_NC_1↵

Table 5-9 Command Format

No	item	Description	type	value	value description	remarks
1	Modify	MD	string	MD		
2	Command	Command string	string	mute_notice		
3	Model ID	Not used	string	0000	Not used	
4	Unit No	Device ID	string	00 to FF	Device ID	
5	Continue Select	Message split method	string	NC	No split	
6	Parameter	Parameter				
	Mute	Mute	string	0 1	Without muting With muting	
7	End Character	Message end character	binary	0x0d	CR	

6 Appendix

6.1 Fader Table

Value	Data[dB]	Value	Data[dB]	Value	Data[dB]	Value	Data[dB]	Value	Data[dB]	Value	Data[dB]	Value	Data[dB]	Value	Data[dB]
0	-Infinity	64	-63.5	128	-36.6	192	-23.8	256	-15.5	320	-9.1	384	-2.7	448	3.7
1	-120.0	65	-63.0	129	-36.4	193	-23.6	257	-15.4	321	-9.0	385	-2.6	449	3.8
2	-118.0	66	-62.5	130	-36.2	194	-23.4	258	-15.3	322	-8.9	386	-2.5	450	3.9
3	-116.0	67	-62.0	131	-36.0	195	-23.2	259	-15.2	323	-8.8	387	-2.4	451	4.0
4	-114.0	68	-61.5	132	-35.8	196	-23.0	260	-15.1	324	-8.7	388	-2.3	452	4.1
5	-112.0	69	-61.0	133	-35.6	197	-22.8	261	-15.0	325	-8.6	389	-2.2	453	4.2
6	-110.0	70	-60.5	134	-35.4	198	-22.6	262	-14.9	326	-8.5	390	-2.1	454	4.3
7	-108.0	71	-60.0	135	-35.2	199	-22.4	263	-14.8	327	-8.4	391	-2.0	455	4.4
8	-106.0	72	-59.5	136	-35.0	200	-22.2	264	-14.7	328	-8.3	392	-1.9	456	4.5
9	-104.0	73	-59.0	137	-34.8	201	-22.0	265	-14.6	329	-8.2	393	-1.8	457	4.6
10	-102.0	74	-58.5	138	-34.6	202	-21.8	266	-14.5	330	-8.1	394	-1.7	458	4.7
11	-100.0	75	-58.0	139	-34.4	203	-21.6	267	-14.4	331	-8.0	395	-1.6	459	4.8
12	-99.0	76	-57.5	140	-34.2	204	-21.4	268	-14.3	332	-7.9	396	-1.5	460	4.9
13	-98.0	77	-57.0	141	-34.0	205	-21.2	269	-14.2	333	-7.8	397	-1.4	461	5.0
14	-97.0	78	-56.5	142	-33.8	206	-21.0	270	-14.1	334	-7.7	398	-1.3	462	5.1
15	-96.0	79	-56.0	143	-33.6	207	-20.8	271	-14.0	335	-7.6	399	-1.2	463	5.2
16	-95.0	80	-55.5	144	-33.4	208	-20.6	272	-13.9	336	-7.5	400	-1.1	464	5.3
17	-94.0	81	-55.0	145	-33.2	209	-20.4	273	-13.8	337	-7.4	401	-1.0	465	5.4
18	-93.0	82	-54.5	146	-33.0	210	-20.2	274	-13.7	338	-7.3	402	-0.9	466	5.5
19	-92.0	83	-54.0	147	-32.8	211	-20.0	275	-13.6	339	-7.2	403	-0.8	467	5.6
20	-91.0	84	-53.5	148	-32.6	212	-19.9	276	-13.5	340	-7.1	404	-0.7	468	5.7
21	-90.0	85	-53.0	149	-32.4	213	-19.8	277	-13.4	341	-7.0	405	-0.6	469	5.8
22	-89.0	86	-52.5	150	-32.2	214	-19.7	278	-13.3	342	-6.9	406	-0.5	470	5.9
23	-88.0	87	-52.0	151	-32.0	215	-19.6	279	-13.2	343	-6.8	407	-0.4	471	6.0
24	-87.0	88	-51.5	152	-31.8	216	-19.5	280	-13.1	344	-6.7	408	-0.3	472	6.1
25	-86.0	89	-51.0	153	-31.6	217	-19.4	281	-13.0	345	-6.6	409	-0.2	473	6.2
26	-85.0	90	-50.5	154	-31.4	218	-19.3	282	-12.9	346	-6.5	410	-0.1	474	6.3
27	-84.0	91	-50.0	155	-31.2	219	-19.2	283	-12.8	347	-6.4	411	0.0	475	6.4
28	-83.0	92	-49.5	156	-31.0	220	-19.1	284	-12.7	348	-6.3	412	0.1	476	6.5
29	-82.0	93	-49.0	157	-30.8	221	-19.0	285	-12.6	349	-6.2	413	0.2	477	6.6
30	-81.0	94	-48.5	158	-30.6	222	-18.9	286	-12.5	350	-6.1	414	0.3	478	6.7
31	-80.0	95	-48.0	159	-30.4	223	-18.8	287	-12.4	351	-6.0	415	0.4	479	6.8
32	-79.5	96	-47.5	160	-30.2	224	-18.7	288	-12.3	352	-5.9	416	0.5	480	6.9
33	-79.0	97	-47.0	161	-30.0	225	-18.6	289	-12.2	353	-5.8	417	0.6	481	7.0
34	-78.5	98	-46.5	162	-29.8	226	-18.5	290	-12.1	354	-5.7	418	0.7	482	7.1
35	-78.0	99	-46.0	163	-29.6	227	-18.4	291	-12.0	355	-5.6	419	0.8	483	7.2
36	-77.5	100	-45.5	164	-29.4	228	-18.3	292	-11.9	356	-5.5	420	0.9	484	7.3
37	-77.0	101	-45.0	165	-29.2	229	-18.2	293	-11.8	357	-5.4	421	1.0	485	7.4
38	-76.5	102	-44.5	166	-29.0	230	-18.1	294	-11.7	358	-5.3	422	1.1	486	7.5
39	-76.0	103	-44.0	167	-28.8	231	-18.0	295	-11.6	359	-5.2	423	1.2	487	7.6
40	-75.5	104	-43.5	168	-28.6	232	-17.9	296	-11.5	360	-5.1	424	1.3	488	7.7
41	-75.0	105	-43.0	169	-28.4	233	-17.8	297	-11.4	361	-5.0	425	1.4	489	7.8
42	-74.5	106	-42.5	170	-28.2	234	-17.7	298	-11.3	362	-4.9	426	1.5	490	7.9
43	-74.0	107	-42.0	171	-28.0	235	-17.6	299	-11.2	363	-4.8	427	1.6	491	8.0
44	-73.5	108	-41.5	172	-27.8	236	-17.5	300	-11.1	364	-4.7	428	1.7	492	8.1
45	-73.0	109	-41.0	173	-27.6	237	-17.4	301	-11.0	365	-4.6	429	1.8	493	8.2
46	-72.5	110	-40.5	174	-27.4	238	-17.3	302	-10.9	366	-4.5	430	1.9	494	8.3
47	-72.0	111	-40.0	175	-27.2	239	-17.2	303	-10.8	367	-4.4	431	2.0	495	8.4
48	-71.5	112	-39.8	176	-27.0	240	-17.1	304	-10.7	368	-4.3	432	2.1	496	8.5
49	-71.0	113	-39.6	177	-26.8	241	-17.0	305	-10.6	369	-4.2	433	2.2	497	8.6
50	-70.5	114	-39.4	178	-26.6	242	-16.9	306	-10.5	370	-4.1	434	2.3	498	8.7
51	-70.0	115	-39.2	179	-26.4	243	-16.8	307	-10.4	371	-4.0	435	2.4	499	8.8
52	-69.5	116	-39.0	180	-26.2	244	-16.7	308	-10.3	372	-3.9	436	2.5	500	8.9
53	-69.0	117	-38.8	181	-26.0	245	-16.6	309	-10.2	373	-3.8	437	2.6	501	9.0
54	-68.5	118	-38.6	182	-25.8	246	-16.5	310	-10.1	374	-3.7	438	2.7	502	9.1
55	-68.0	119	-38.4	183	-25.6	247	-16.4	311	-10.0	375	-3.6	439	2.8	503	9.2
56	-67.5	120	-38.2	184	-25.4	248	-16.3	312	-9.9	376	-3.5	440	2.9	504	9.3
57	-67.0	121	-38.0	185	-25.2	249	-16.2	313	-9.8	377	-3.4	441	3.0	505	9.4
58	-66.5	122	-37.8	186	-25.0	250	-16.1	314	-9.7	378	-3.3	442	3.1	506	9.5
59	-66.0	123	-37.6	187	-24.8	251	-16.0	315	-9.6	379	-3.2	443	3.2	507	9.6
60	-65.5	124	-37.4	188	-24.6	252	-15.9	316	-9.5	380	-3.1	444	3.3	508	9.7
61	-65.0	125	-37.2	189	-24.4	253	-15.8	317	-9.4	381	-3.0	445	3.4	509	9.8
62	-64.5	126	-37.0	190	-24.2	254	-15.7	318	-9.3	382	-2.9	446	3.5	510	9.9
63	-64.0	127	-36.8	191	-24.0	255	-15.6	319	-9.2	383	-2.8	447	3.6	511	10.0

6.3 Q Value Table

#	Quality
0	0.3
1	0.35
2	0.41
3	0.47
4	0.55
5	0.64
6	0.75
7	0.87
8	1
9	1.2
10	1.4
11	1.6
12	1.9
13	2.2
14	2.5
15	3
16	3.5
17	4
18	4.5
19	5
20	6
21	7
22	8.4
23	10
24	12
25	14
26	16
27	19
28	22
29	25
30	30
31	60

6.4 EQ Gain Table

#	Gain	#	Gain	#	Gain
0	-18	25	-5.5	50	7
1	-17.5	26	-5	51	7.5
2	-17	27	-4.5	52	8
3	-16.5	28	-4	53	8.5
4	-16	29	-3.5	54	9
5	-15.5	30	-3	55	9.5
6	-15	31	-2.5	56	10
7	-14.5	32	-2	57	10.5
8	-14	33	-1.5	58	11
9	-13.5	34	-1	59	11.5
10	-13	35	-0.5	60	12
11	-12.5	36	0	61	12.5
12	-12	37	0.5	62	13
13	-11.5	38	1	63	13.5
14	-11	39	1.5	64	14
15	-10.5	40	2	65	14.5
16	-10	41	2.5	66	15
17	-9.5	42	3	67	15.5
18	-9	43	3.5	68	16
19	-8.5	44	4	69	16.5
20	-8	45	4.5	70	17
21	-7.5	46	5	71	17.5
22	-7	47	5.5	72	18
23	-6.5	48	6		
24	-6	49	6.5		

6.5 Input Gain Table

Value	Mic [dB]	Value	Mic [dB]	Value	Mic [dB]
0	0	11	11	21	21
1	1	12	12	22	22
2	2	13	13	23	23
3	3	14	14	24	24
4	4	15	15	25	25
5	5	16	16	26	26
6	6	17	17	27	27
7	7	18	18	28	28
8	8	19	19	29	29
9	9	20	20	30	30
10	10	21	21		

6.6 Transfer data type

No	Item	Description	Type	Value	Value Description	Remarks
1	kind	Transfer data type	string	p1 to p16	Preset 1 to 16	
2				log	Logging file	

6.7 Attenuation Level Table

#	Display
0	$-\infty$
1	-30dB
2	-29dB
3	-28dB
4	-27dB
5	-26dB
6	-25dB
7	-24dB
8	-23dB
9	-22dB
10	-21dB
11	-20dB
12	-19dB
13	-18dB
14	-17dB
15	-16dB
16	-15dB
17	-14dB
18	-13dB
19	-12dB
20	-11dB
21	-10dB
22	-9dB
23	-8dB
24	-7dB
25	-6dB
26	-5dB
27	-4dB
28	-3dB

6.8 Version correspondence table

Document ver.	ATND1061DAN FW Version					ATND1061LK FW Version	
	1.0.0	1.0.1	1.0.2	1.0.4	1.1.0	1.0.0	1.1.0
1.0							
2.0							
3.0							
4.0							

株式会社オーディオテクニカ

〒194-8666 東京都町田市西成瀬2-46-1
www.audio-technica.co.jp

Audio-Technica Corporation

2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan
www.audio-technica.com
©2023 Audio-Technica Corporation
Global Support Contact: www.at-globalsupport.com

ver.1 2021.12.15
ver.3 2023.08.01